



# HP EliteBook Revolve 810 G1

Maintenance and Service Guide

**IMPORTANT!** This document is intended for  
HP authorized service providers only.

© Copyright 2013 Hewlett-Packard  
Development Company, L.P.

Bluetooth is a trademark owned by its proprietor and used by Hewlett-Packard Company under license. Intel and Core are U.S. registered trademarks of Intel Corporation. Microsoft and Windows are U.S. registered trademarks of Microsoft Corporation. SD Logo is a trademark of its proprietor.

The information contained herein is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

First Edition: March 2013

Document Part Number: 709341-001

## Safety warning notice

---

**⚠ WARNING!** To reduce the possibility of heat-related injuries or of overheating the device, do not place the device directly on your lap or obstruct the device air vents. Use the device only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The device and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

---



---

# Table of contents

<b>1 Product description .....</b>	<b>1</b>
<b>2 External component identification .....</b>	<b>7</b>
Display .....	9
Keys .....	10
Lights .....	11
TouchPad .....	12
Left side .....	12
Rear .....	13
Right side .....	14
Bottom .....	15
<b>3 Illustrated parts catalog .....</b>	<b>16</b>
Service tag .....	17
Computer major components .....	18
Miscellaneous parts .....	21
Sequential part number listing .....	22
<b>4 Removal and replacement procedures .....</b>	<b>26</b>
Preliminary replacement requirements .....	26
Tools required .....	26
Service considerations .....	26
Plastic parts .....	26
Cables and connectors .....	27
Drive handling .....	27
Grounding guidelines .....	28
Electrostatic discharge damage .....	28
Packaging and transporting guidelines .....	29
Component replacement procedures .....	31
Service tag .....	31
Battery .....	33

Service cover .....	34
WWAN module .....	36
WLAN module .....	38
Solid-state drive .....	40
Memory module .....	41
NFC board .....	43
Keyboard .....	44
Bottom cover .....	48
Speakers .....	50
Button board .....	52
RTC battery .....	54
Fan/heat sink assembly .....	55
System board .....	57
Hinge cover .....	59
Display assembly .....	61

## **5 Computer Setup (BIOS) and Advanced System Diagnostics ..... 63**

Using Computer Setup .....	63
Starting Computer Setup .....	63
Navigating and selecting in Computer Setup .....	63
Restoring factory settings in Computer Setup .....	64
Updating the BIOS .....	65
Determining the BIOS version .....	65
Downloading a BIOS update .....	66
Using Advanced System Diagnostics .....	67

## **6 Specifications ..... 68**

Computer specifications .....	68
11.6-inch UWVA display specifications .....	69

## **7 Backup and recovery ..... 70**

Windows 8 .....	70
Backing up your information .....	70
Performing a system recovery .....	71
Using the Windows recovery tools .....	71
Using f11 recovery tools .....	72
Using Windows 8 operating system media (purchased separately) .....	73
Using Windows Refresh for quick and easy recovery .....	73
Remove everything and reinstall Windows .....	74
Using HP Software Setup .....	75

Windows 7 .....	75
Creating recovery media with HP Recovery Disc Creator .....	76
Creating recovery media .....	76
Backing up your information .....	76
Performing a system recovery .....	77
Using the Windows recovery tools .....	77
Using f11 recovery tools .....	78
Using a Windows 7 operating system DVD (purchased separately) .....	79
<b>8 Power cord set requirements .....</b>	<b>80</b>
Requirements for all countries .....	80
Requirements for specific countries and regions .....	81
<b>9 Recycling .....</b>	<b>82</b>
<b>Index .....</b>	<b>83</b>





# 1 Product description

Category	Description
<b>Product Name</b>	HP EliteBook Revolve 810 G1
<b>Processors</b>	<ul style="list-style-type: none"><li>• Intel® Dual Core® i7-3687U 2.10-GHz processor (turbo up to 3.30-GHz), 1600-MHz front-side bus (FSB), 4.00-MB L3 cache, 17 W</li><li>• Intel Dual Core i5-3437U 1.90-GHz processor (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W</li><li>• Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W</li></ul>
<b>Chipset</b>	Mobile Intel QM77 PCH chipset
<b>Graphics</b>	Intel HD Graphics 4000 integrated universal memory architecture (UMA) graphics Support for dual-display ports through the dock
<b>Panel</b>	11.6-in high-definition (HD), light-emitting diode (LED), AntiGlare (AG), UWVA (1366x768), ultraslim display with webcam and microphone  Touchscreen enabled  Typical brightness: 400 nits
<b>Memory</b>	One customer-accessible/upgradable memory module slot + 4-GB on the system board  Support for DDR3L PC-3 12800 (1600-MHz)  Support for 12288-MB of system RAM in the following configurations: <ul style="list-style-type: none"><li>• 12288-MB (8192-MB memory module + 4096-MB on system board)</li><li>• 8192-MB (4096-MB memory module + 4096-MB on system board)</li><li>• 4096-MB (4096-MB on system board)</li></ul>
<b>Solid-state drive</b>	Support for mSATA solid-state drives  Serial ATA III  Support for the following single solid-state drive configurations: <ul style="list-style-type: none"><li>• 256-GB mSATA</li><li>• 128-GB mSATA</li></ul>

<b>Category</b>	<b>Description</b>
<b>Audio and video</b>	DTS Studio sound
	Integrated dual-array microphones Stereo speakers (2) Camera 720p
	Camera 720p Stereo Speakers (2)
<b>Ethernet</b>	Integrated Intel 82579LM 10/100/1000 network interface card (NIC)
<b>Wireless</b>	Integrated wireless personal area network (WPAN) option supported only through combination module
	Two WLAN antennas built into display assembly
	Integrated wireless local area network (WLAN) options by way of wireless module
	Support for the following WLAN modules: <ul style="list-style-type: none"> <li>• Intel Centrino Advanced-N 6235 Combo Adapter</li> <li>• Intel Centrino Advanced-N 6205 Combo Adapter</li> </ul>
	Support for no WLAN/Bluetooth option
	Two WWAN antennas built into display assembly
	Integrated wireless wide area network (WWAN) options by way of wireless module
	Support for the following WWAN modules: <ul style="list-style-type: none"> <li>• HP un2430 EV-DO/HSPA Mini Card</li> <li>• HP hs2350 HSPA+ Mobile Broadband Module</li> </ul>
	WWAN secured by micro-SIM
	Support for no WWAN option
Support for WWAN after market option	
	Integrated near field communication (NFC) module and antenna
<b>External media cards</b>	Micro-Secure Digital slot
	Combo Headphone/MIC jack side docking connector
<b>Ports</b>	<ul style="list-style-type: none"> <li>• AC adapter</li> <li>• Audio-in (mono microphone)/audio-out (stereo headphone) combination</li> <li>• DisplayPort 1.1a</li> <li>• Docking</li> <li>• RJ-45 (Ethernet)</li> <li>• USB 3.0 (2)</li> </ul>

<b>Category</b>	<b>Description</b>
<b>Sensors</b>	<ul style="list-style-type: none"> <li>• Accelerometer</li> <li>• ALS</li> <li>• Compass</li> <li>• Gyro</li> <li>• NFC with Secure Element</li> <li>• Proximity (SAR)</li> </ul>
<b>Docking</b>	2013 UltraSlim Docking Station
<b>Keyboard/pointing devices</b>	<p>Full-size, backlit, spill-resistant keyboard with DuraKeys and active pen</p> <p>Gesture support: MultiTouch gestures enabled, two-finger scrolling, and pinch-zoom as default</p> <p>Taps enabled by default</p> <p>Support for ClickPad with image sensor, scroll, pinch, zoom, rotate, and 3-finger flick)</p>
<b>Power requirements</b>	<p>Support for 65-W HP Smart AC adapter (RC, V, EM, 3-wire) and 45-W HP Smart AC adapter (RC, V, non-PFC, 3-wire)</p> <p>Support for 6-cell, 44-Wh, 1.98-Ah, Li-ion battery (Li-ion)</p>
<b>Security</b>	<ul style="list-style-type: none"> <li>• Support for security cable lock</li> <li>• Support for Trusted Platform Module (TPM) 1.2 Enhanced Drive Lock</li> <li>• HP ProtectTools (Limited Suite)</li> <li>• HP Power Assistant</li> <li>• Preboot Authentication (Password)</li> </ul>

Category	Description
<b>Operating system</b>	<p data-bbox="564 226 703 254"><b>Preinstalled:</b></p> <ul data-bbox="564 281 1450 688" style="list-style-type: none"> <li data-bbox="564 281 1417 308">• Windows® 8 ML 64-bit with Microsoft® Basics (Japanese and Japanese English only)</li> <li data-bbox="564 333 1353 390">• Windows 8 Professional 64-bit DPK with Windows 7 Professional 64-bit image (Japanese and Japanese English only)</li> <li data-bbox="564 415 1342 472">• Windows 8 Professional 64-bit with Microsoft Basics (Japanese and Japanese English only)</li> <li data-bbox="564 497 1374 554">• Windows 7 Home Premium 64-bit with Microsoft Basics (includes Service Pack 1; Japanese and Japanese English only)</li> <li data-bbox="564 579 1450 636">• Windows 7 Professional 64-bit with Microsoft Basics (includes Service Pack 1; Japanese and Japanese English only)</li> <li data-bbox="564 661 730 688">• FreeDos 2.0</li> </ul> <p data-bbox="564 716 948 743"><b>Preinstalled with Microsoft Office:</b></p> <ul data-bbox="564 770 1450 1780" style="list-style-type: none"> <li data-bbox="564 770 1406 827">• Windows 8 CH 64-bit with Microsoft Office 2010 Transition OPK (People's Republic of China only)</li> <li data-bbox="564 852 1366 909">• Windows 8 EM 64-bit with Microsoft Office 2010 Transition OPK (not available in Japan)</li> <li data-bbox="564 934 1390 961">• Windows 8 ML 64-bit with Microsoft Office 2010 Home and Business (Japan only)</li> <li data-bbox="564 987 1286 1014">• Windows 8 ML 64-bit with Microsoft Office 2010 Personal (Japan only)</li> <li data-bbox="564 1039 1318 1066">• Windows 8 ML 64-bit with Microsoft Office 2010 Professional (Japan only)</li> <li data-bbox="564 1092 1361 1148">• Windows 8 ML 64-bit with Microsoft Office 2010 Transition OPK (not available in Japan)</li> <li data-bbox="564 1173 1353 1230">• Windows 8 Professional 64-bit with Microsoft Office 2010 Home and Business (Japan only)</li> <li data-bbox="564 1255 1369 1283">• Windows 8 Professional 64-bit with Microsoft Office 2010 Personal (Japan only)</li> <li data-bbox="564 1308 1401 1335">• Windows 8 Professional 64-bit with Microsoft Office 2010 Professional (Japan only)</li> <li data-bbox="564 1360 1353 1417">• Windows 8 Professional 64-bit with Microsoft Office 2010 Transition OPK (not available in Japan)</li> <li data-bbox="564 1442 1394 1499">• Windows 8 Professional 64-bit DPK with Windows 7 Professional 64-bit image and Microsoft Office 2010 Home and Business (Japan only)</li> <li data-bbox="564 1524 1394 1581">• Windows 8 Professional 64-bit DPK with Windows 7 Professional 64-bit image and Microsoft Office 2010 Personal (Japan only)</li> <li data-bbox="564 1606 1394 1692">• Windows 8 Professional 64-bit DPK with Windows 7 Professional 64-bit image and Microsoft Office 2010 Transition OPK (not available in Asia Pacific, Japan, or the People's Republic of China)</li> <li data-bbox="564 1717 1394 1774">• Windows 8 Professional 64-bit DPK with Windows 7 Professional 64-bit image DPK and Microsoft Office 2010 Professional (Japan only)</li> </ul>

Category	Description
<b>Operating system</b> <i>(continued)</i>	<p data-bbox="592 226 1082 254"><b>Preinstalled with Microsoft Office:</b> <i>(continued)</i></p> <ul data-bbox="592 281 1453 911" style="list-style-type: none"> <li data-bbox="592 281 1406 338">• Windows 7 Home Premium 64-bit with Microsoft Office 2010 Home and Business (Japan only; includes Service Pack 1)</li> <li data-bbox="592 365 1422 422">• Windows 7 Home Premium 64-bit with Microsoft Office 2010 Personal (Japan only; includes Service Pack 1)</li> <li data-bbox="592 449 1453 506">• Windows 7 Home Premium 64-bit with Microsoft Office 2010 Professional (Japan only; includes Service Pack 1)</li> <li data-bbox="592 533 1406 590">• Windows 7 Home Premium 64-bit with Microsoft Office 2010 Transition OPK (not available in Japan; includes Service Pack 1)</li> <li data-bbox="592 617 1374 674">• Windows 7 Professional 64-bit with Microsoft Office 2010 Home and Business (Japan only; includes Service Pack 1)</li> <li data-bbox="592 701 1390 758">• Windows 7 Professional 64-bit with Microsoft Office 2010 Personal (Japan only; includes Service Pack 1)</li> <li data-bbox="592 785 1422 842">• Windows 7 Professional 64-bit with Microsoft Office 2010 Professional (Japan only; includes Service Pack 1)</li> <li data-bbox="592 869 1374 926">• Windows 7 Professional 64-bit with Microsoft Office 2010 Transition OPK (not available in Japan; includes Service Pack 1)</li> </ul> <p data-bbox="592 940 847 968"><b>Restore Media–DRDVD:</b></p> <ul data-bbox="592 995 1382 1129" style="list-style-type: none"> <li data-bbox="592 995 1382 1052">• DRDVD Windows 8: Available with Windows 8 or Windows 8 Professional Loc required with any Windows 7 Professional downgrade operating system</li> <li data-bbox="592 1079 1374 1129">• DRDVD Windows 7: Available with Windows 7 Home Premium or Windows 7 Professional downgrade</li> </ul> <p data-bbox="592 1157 847 1184"><b>Restore Media–OSDVD:</b></p> <ul data-bbox="592 1211 1445 1457" style="list-style-type: none"> <li data-bbox="592 1211 1358 1268">• Windows 8 Professional 64-bit: Available only and required with Windows 7 Professional downgrade operating system</li> <li data-bbox="592 1295 1445 1352">• Windows 7 Home Premium 64-bit: Available with Windows 7 Home Premium Loc (not available in Asia Pacific or the People's Republic of China)</li> <li data-bbox="592 1379 1445 1457">• Windows 7 Professional 64-bit: Available with Windows Professional Loc or Windows 7 Professional downgrade loc (not available in Asia Pacific or the People's Republic of China)</li> </ul> <p data-bbox="592 1484 855 1512"><b>Certified:</b> Microsoft WHQL</p>

Category	Description
<b>Operating system</b> <i>(continued)</i>	<b>Web-only support:</b> <i>(continued)</i> <ul style="list-style-type: none"> <li>• Windows 8 32-bit</li> <li>• Windows 8 CH 32-bit</li> <li>• Windows 8 EM 32-bit</li> <li>• Windows 8 Enterprise 64-bit</li> <li>• Windows 8 Enterprise 32-bit</li> <li>• Windows 8 ML 32-bit</li> <li>• Windows 8 Professional 32-bit</li> <li>• Windows 7 Home Basic 64-bit</li> <li>• Windows 7 Home Basic 32-bit</li> <li>• Windows 7 Home Premium 32-bit</li> <li>• Windows 7 Professional 32-bit</li> <li>• Windows 7 Ultimate 64-bit</li> <li>• Windows 7 Ultimate 32-bit</li> </ul>
<b>Serviceability</b>	<b>End user replaceable part:</b> AC adapter <ul style="list-style-type: none"> <li>• AC adapter</li> <li>• Battery</li> <li>• Memory module</li> <li>• mSATA solid-state drive</li> <li>• 2013 UltraSlim Docking Station</li> <li>• WLAN module</li> <li>• WWAN module</li> </ul>

---

## 2 External component identification





---

**⚠ CAUTION:** To prevent damage to the display hinges, when in notebook configuration, do not rotate the display counterclockwise, and do not force the rotating action.

---


#### **To change your notebook to a tablet**

- 1.** Rotate the display clockwise 180 degrees until the display faces backwards.
- 2.** Lower the display over the keyboard.

To change the tablet back into a notebook, reverse these steps.




# Display

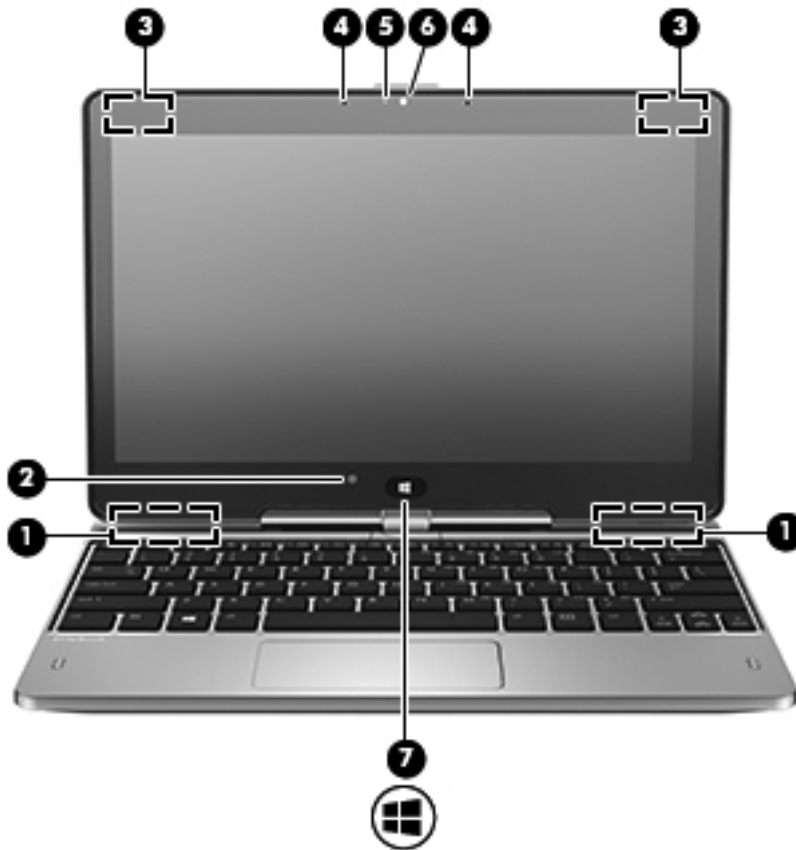


Item	Component	Description
(1)	WLAN antennas (2)*	Send and receive wireless signals to communicate with wireless local area networks (WLAN).
(2)	Ambient light sensor	Brightens or dims the display in response to ambient light.
(3)	WWAN antennas (2)*	Send and receive wireless signals to communicate with wireless wide area networks (WWAN).
(4)	Internal microphones (2)	Record sound.
(5)	Webcam light	On: The webcam is in use.
(6)	Webcam	Records video and captures still photographs. For information on using the webcam, access HP Support Assistant. To access HP Support Assistant on the Start screen, select the <b>HP Support Assistant</b> app.
(7)	Windows Home button	Returns you to the Start screen.

\*The antennas are not visible on the outside of the computer. For optimal transmission, keep the areas immediately around the antennas free from obstructions. To see wireless regulatory notices, see the section of the *Regulatory, Safety, and Environmental Notices* that applies to your country or region. To access the user guides, select the **HP Support Assistant** app on the Start screen, select **My computer**, and then select **User guides**.

# Keys

 **NOTE:** Your computer may look slightly different from the illustration in this section.

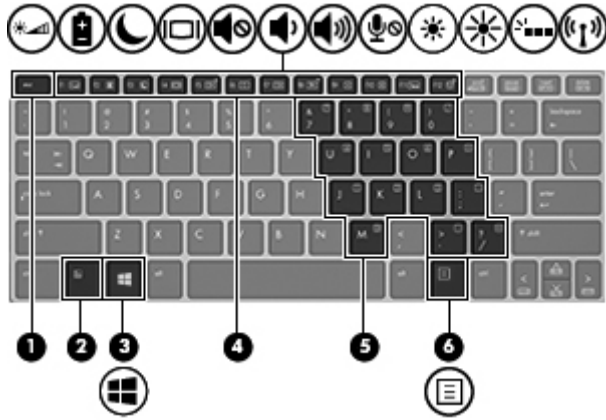


Item	Component	Description
(1)	esc key	Displays system information when pressed in combination with the <b>fn</b> key.
(2)	fn key	Executes frequently used system functions when pressed in combination with a function key, the <b>num lk</b> key, the <b>esc</b> key, or the <b>b</b> key.
(3)	Windows button	Returns you to the Start screen from an open app or the Windows desktop. <b>NOTE:</b> Pressing the Windows button again will return you to the previous screen.
(4)	Function keys	Execute frequently used system functions when pressed in combination with the <b>fn</b> key.
(5)	Embedded numeric keypad	When the keypad is turned on, it can be used like an external numeric keypad. Each key on the keypad performs the function indicated by the icon in the upper-right corner of the key.
(6)	Windows application key	Displays options for a selected object.

# Lights




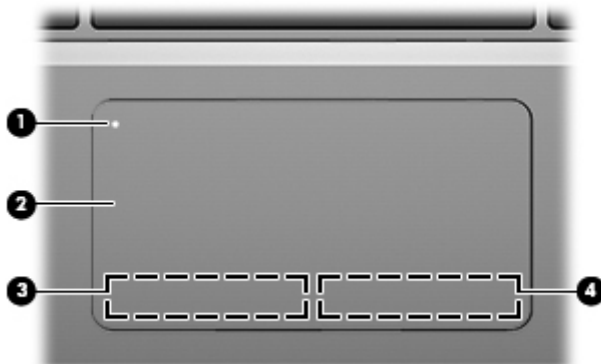
**NOTE:** Your computer may look slightly different from the illustration in this section.

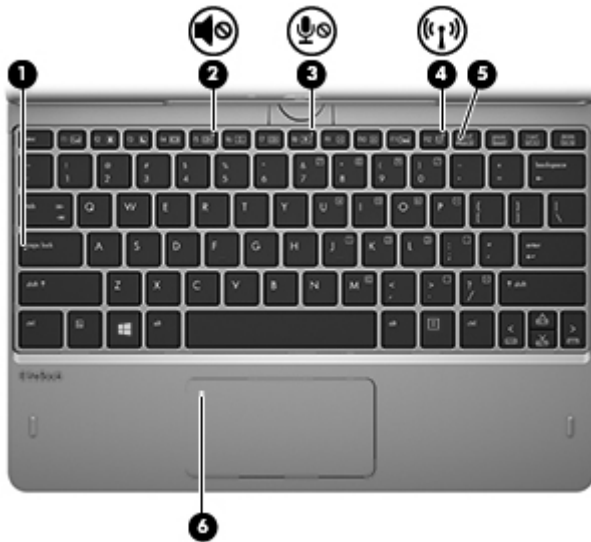

Item	Component	Description
(1)	Caps lock light	On: Caps lock is on.
(2)	Mute light	<ul style="list-style-type: none"><li>• Amber: Computer sound is off.</li><li>• Off: Computer sound is on.</li></ul>
(3)	Microphone mute light	<ul style="list-style-type: none"><li>• Amber: Muted.</li><li>• Off: Microphone is on.</li></ul>
(4)	Wireless light	<ul style="list-style-type: none"><li>• White: An integrated wireless device, such as a WLAN device and/or a Bluetooth device, is on.</li><li>• Amber: All wireless devices are off.</li></ul>
(5)	Num lock light	On: Num lock is on.
(6)	TouchPad light	<ul style="list-style-type: none"><li>• Amber: The TouchPad is off.</li><li>• Off: The TouchPad is on.</li></ul>


# TouchPad


 **NOTE:** Your computer may look slightly different from the illustration in this section.



Item	Component	Description
(1)	TouchPad on/off button	Turns the TouchPad on or off.
(2)	TouchPad zone	Moves the pointer and selects or activates items on the screen.
(3)	Left TouchPad button	Functions like the left button on an external mouse.
(4)	Right TouchPad button	Functions like the right button on an external mouse.


# Left side


 **NOTE:** Your computer may look slightly different from the illustration in this section.

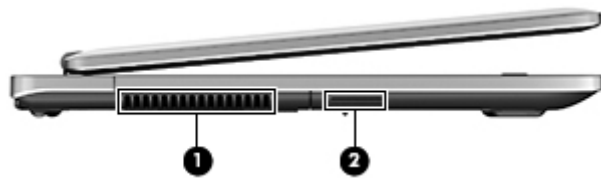

Item	Component	Description
(1)	Vent	Enables airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(2)	Speaker	Produces sound.


# Rear

 **NOTE:** Your computer may look slightly different from the illustration in this section.

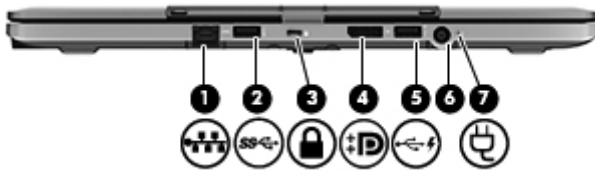


Item	Component	Description
(1)	RJ-45 (network) jack	Connects a network cable.
(2)	USB 3.0 ports (1)	USB 3.0 ports (1) Connect optional USB 3.0 devices and provide enhanced USB power performance.
(3)	Security cable slot	Attaches an optional security cable to the computer.  <b>NOTE:</b> The security cable is designed to act as a deterrent, but it may not prevent the computer from being mishandled or stolen.
(4)	DisplayPort	Connects an optional digital display device, such as a high-performance monitor or projector.
(5)	USB 3.0 charging port	USB 3.0 charging port Connects an optional USB device. The USB 3.0 charging port can also charge select models of cell phones and MP3 players, even when the computer is off.  <b>NOTE:</b> A USB charging port (also referred to as a powered USB port) allows you to charge connected USB devices. Standard USB ports will not charge all USB devices or will charge using a low current. Some USB devices require power and require you to use a powered port.
(6)	Power connector	Connects an AC adapter.
(7)	AC adapter light	<ul style="list-style-type: none"> <li>• White: The AC adapter is connected and the battery is charged.</li> <li>• Amber: The AC adapter is connected and the battery is charging.</li> <li>• Off: The computer is using DC power.</li> </ul>


## Right side

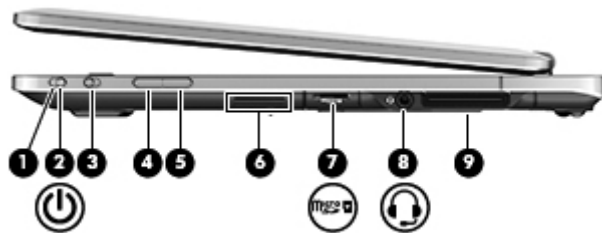

Item	Component	Description
(1)	Power button	Turns power on and off.
(2)	Power light	<ul style="list-style-type: none"> <li>On: The computer is on.</li> <li>Blinking: The computer is in the Sleep state.</li> <li>Off: The computer is off.</li> </ul>
(3)	Rotation lock button	<p>Locks screen orientation in either Landscape or Portrait mode.</p> <p><b>NOTE:</b> When you move between notebook and tablet configuration, the computer screen will automatically change to vertical or horizontal. To lock the current screen orientation, slide the screen orientation button.</p>
(4)	Volume button	Lowers the volume.
(5)	Volume button	Raises the volume.
(6)	Speaker	Produces sound.
(7)	Media Card Reader	Supports a micro SD High Capacity (SDHC) memory card or an optional wireless micro subscriber identity module (SIM).
(8)	Audio-out (headphone) jack/Audio-in (microphone) jack	<p>Produces sound when connected to optional powered stereo speakers, headphones, earbuds, a headset, or television audio. Also connects an optional headset microphone.</p> <p><b>WARNING!</b> To reduce the risk of personal injury, adjust the volume before putting on headphones, earbuds, or a headset. For additional safety information, see the <i>Regulatory, Safety, and Environmental Notices</i>. To access the user guides, select the <b>HP Support Assistant</b> app on the Start screen, select <b>My computer</b>, and then select <b>User guides</b>.</p> <p><b>NOTE:</b> When a device is connected to the jack, the computer speakers are disabled.</p> <p><b>NOTE:</b> Be sure that the device cable has a 4-conductor connector that supports both audio-out (headphone) and audio-in (microphone).</p>
(9)	Docking port	Connects an optional docking device.

# Bottom

 **NOTE:** Your computer may look slightly different from the illustration in this section.

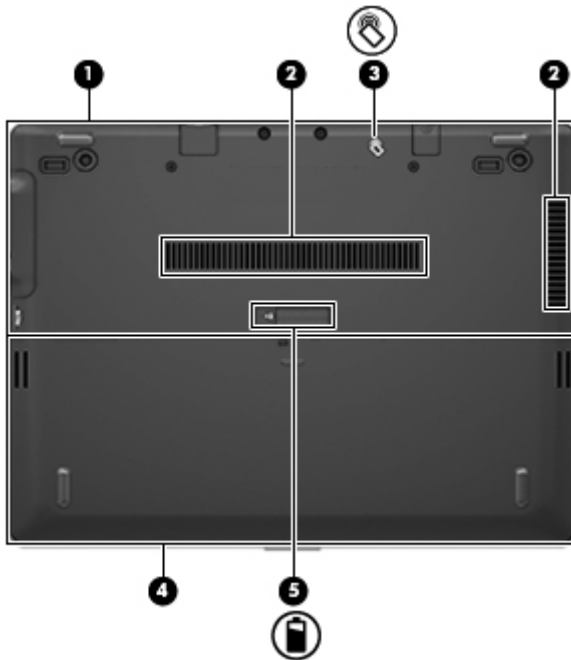

Item	Component	Description
(1)	Service cover	Contains the hard drive, the WLAN module slot, the WWAN module slot (select models only), and the memory module slots.  <b>CAUTION:</b> To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore computer functionality, and then contact support through HP Support Assistant. To access <b>HP Support Assistant</b> on the Start screen, select the <b>HP Support Assistant</b> app.
(2)	Vents	Enables airflow to cool internal components.  <b>NOTE:</b> The computer fan starts up automatically to cool internal components and prevent overheating. It is normal for the internal fan to cycle on and off during routine operation.
(3)	Near Field Communication (NFC) antenna	With HP TouchZone, you can wirelessly connect, communicate, and transfer data/information to and from your NFC-compatible devices.
(4)	Battery bay	Holds the battery.
(5)	Battery bay cover release latch	Releases the battery cover over the battery bay.


---

# 3 Illustrated parts catalog




# Service tag

When ordering parts or requesting information, provide the computer serial number and model number provided on the service tag. It is necessary to remove the battery to obtain these numbers. See [Battery on page 33](#) for battery removal instructions.

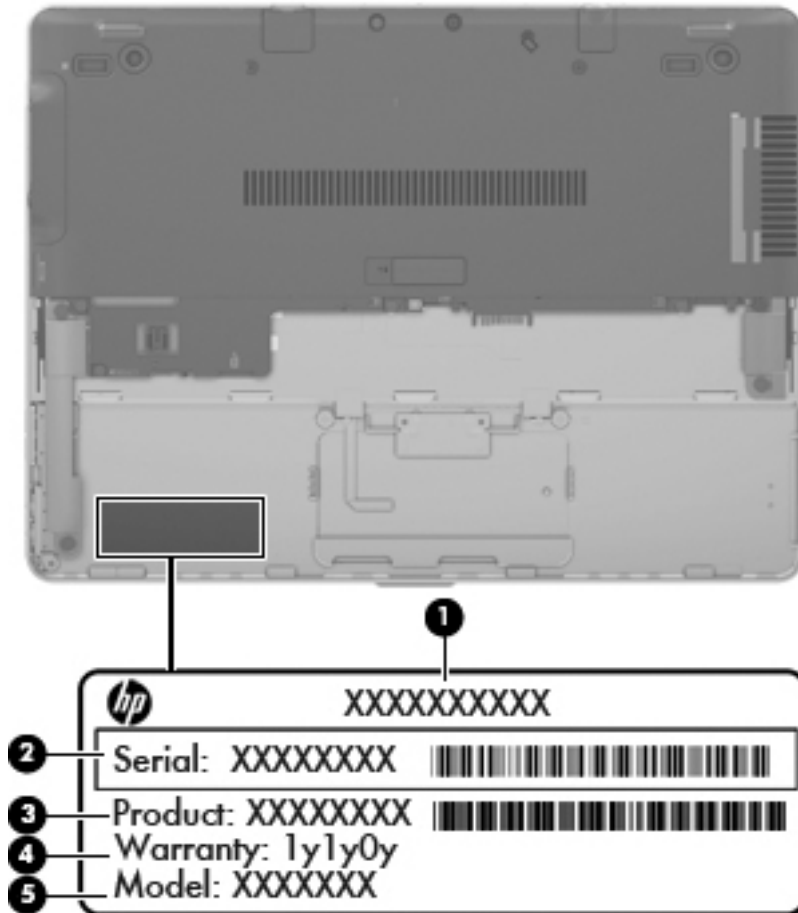

Item	Description	Function
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.
(3)	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician to determine what components and parts are needed.
(4)	Warranty period	This number describes the duration of the warranty period for the computer.
(5)	Model description	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.

# Computer major components

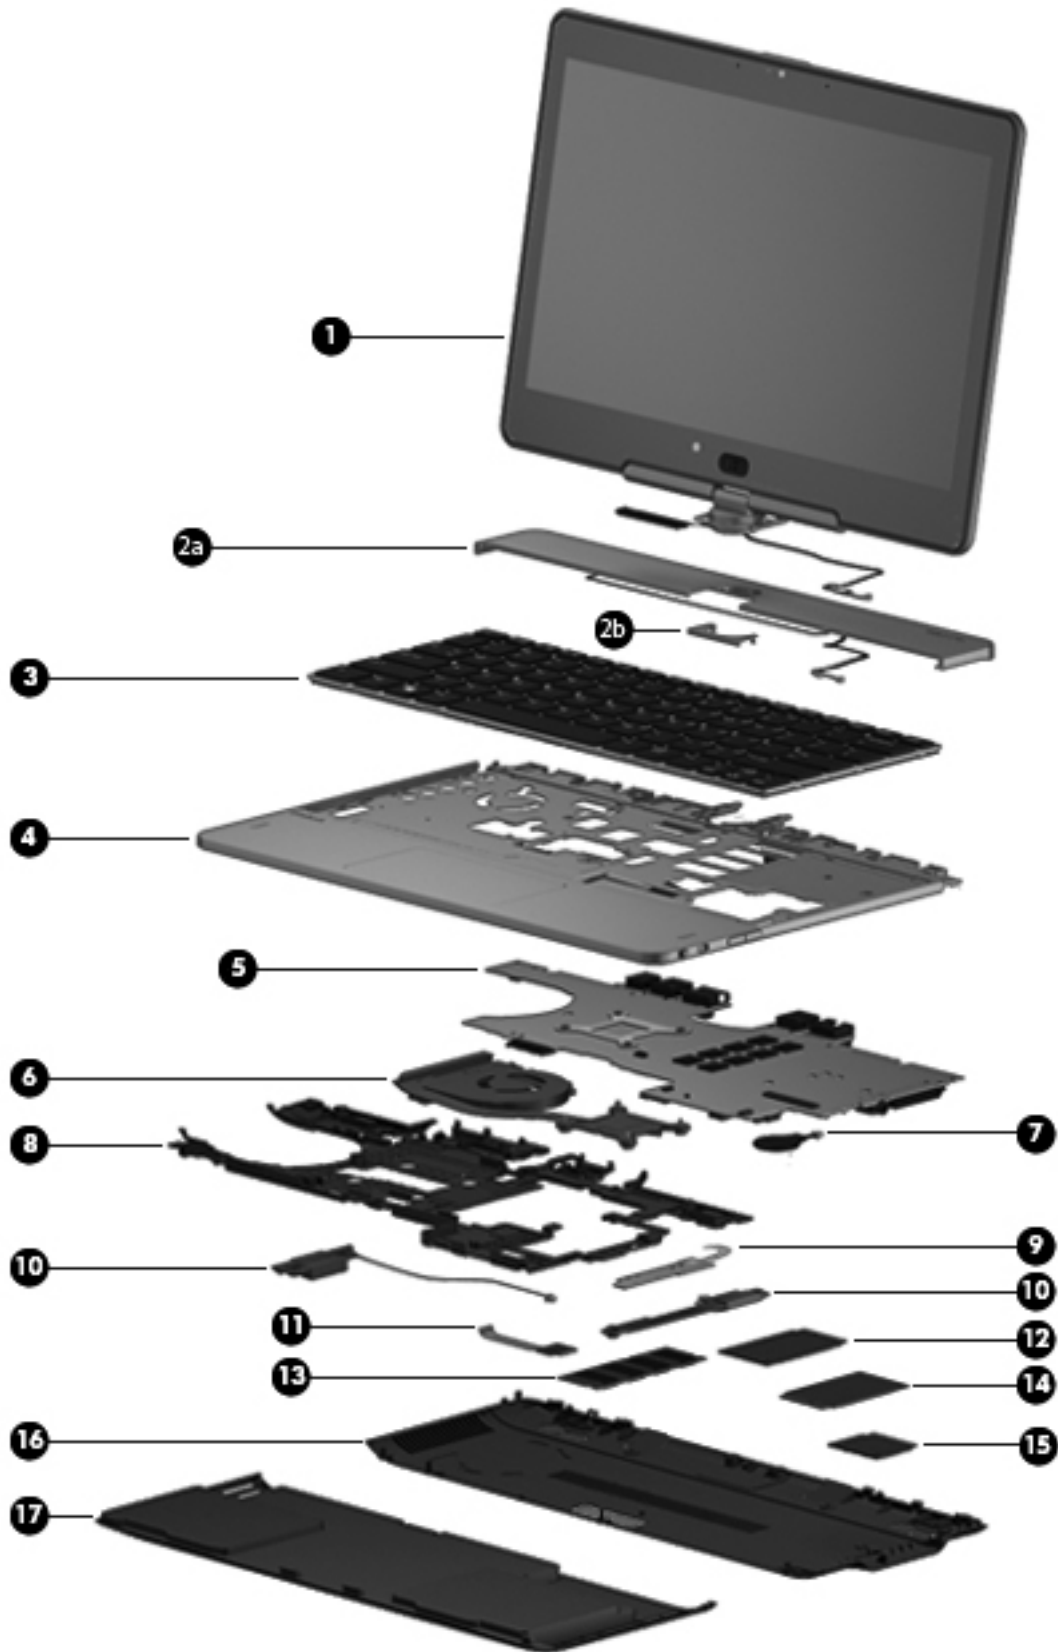

Item	Component	Spare part number
(1)	<b>Display assembly</b> , 11.6-in, AntiGlare (1366x768), HD, UWVA (includes display hinge, microphones, webcam, and Windows button)	716734-001
(2a)	<b>Hinge cover</b> (includes <b>hinge cap (2b)</b> , WWAN antenna cables and transceivers, and WWAN antenna cable shield)	716743-001
(3)	<b>Keyboard</b> with backlight (includes backlight cable and keyboard cable):	
	For use in Belgium	716747-A41
	For use in Brazil	716747-201
	For use in Bulgaria	716747-261
	For use in Canada	716747-DB1
	For use in the Czech Republic and Slovakia	716747-FL1
	For use in Denmark	716747-081
	For use in France	716747-051
	For use in Germany	716747-041
	For use in Greece	716747-151
	For use in Hungary	716747-211
	For use in Iceland	716747-DD1
	For use in India	716747-D61
	For use in Israel	716747-BB1
	For use in Italy	716747-061
	For use in Japan	716747-291
	For use in Latin America	716747-161
	For use in the Netherlands	716747-B31
	For use in Norway	716747-091
	For use in Northwest Africa	716747-FP1
	For use in Portugal	716747-131
	For use in Romania	716747-271
	For use in Russia	716747-251
	For use in Saudi Arabia	716747-171
	For use in Slovenia	716747-BA1
	For use in South Korea	716747-AD1
	For use in Spain	716747-071
	For use in Sweden and Finland	716747-B71
	For use in Switzerland	716747-BG1

<b>Item</b>	<b>Component</b>	<b>Spare part number</b>
	For use in Taiwan	716747-AB1
	For use in Thailand	716747-281
	For use in Turkey	716747-141
	For use in the United Kingdom and Singapore	716747-031
	For use in the United States	716747-001
<b>(4)</b>	<b>Top cover</b> (includes display lid switch actuator magnets, orientation lock switch actuator, power switch actuator, TouchPad, and TouchPad cable)	716741-001
<b>(5)</b>	<b>System board</b> (includes processor, replacement thermal material, and RTC battery):	
	Equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system	716733-601
	Equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system	716733-501
	Equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 7 operating system	716733-001
	Equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system	716732-601
	Equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system	716732-501
	Equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 7 operating system	716732-001
	Equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system	716731-601
	Equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system	716731-501
	Equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 7 operating system	716731-001
<b>(6)</b>	<b>Fan/heat sink assembly</b> (includes replacement thermal material)	716736-001
<b>(7)</b>	<b>RTC battery</b> (includes cable and double-sided adhesive)	716742-001
<b>(8)</b>	<b>Bottom cover</b> (includes battery release latch, NFC board antenna cable, power connector cover, and RJ-45 jack cover)	716739-001
<b>(9)</b>	<b>Button board</b> (includes cable)	716735-001
<b>(10)</b>	<b>Speaker Kit</b> (includes left and right speakers and cables)	716740-001
<b>(11)</b>	<b>NFC board</b> (includes cable)	716738-001
<b>(12)</b>	<b>Memory module</b> (PC3L, 12800, 1600-MHz):	
	8-GB	693374-001
	4-GB	691740-001

Item	Component	Spare part number
<b>(13)</b>	<b>Solid-state drive:</b>	
	256-GB	716749-001
	128-GB	716748-001
<b>(14)</b>	<b>WWAN module:</b>	
	HP un2430 EV-DO/HSPA Mini Card	702080-001
	HP hs2350 HSPA+ Mobile Broadband Module	710788-001
<b>(15)</b>	<b>WLAN module:</b>	
	Intel Centrino Advanced-N 6235 Combo Adapter	670292-001
	Intel Centrino Advanced-N 6205 Combo Adapter	695915-001
<b>(16)</b>	<b>Service cover</b> (includes 4 captive retention screws and 2 rubber feet)	716737-001
	<b>Plastics/Rubber Kit</b> (not illustrated, includes 4 service cover rubber screw covers and micro SD Card bezel)	716744-001
<b>(17)</b>	<b>6-cell, 44-Wh, 1.98-Ah, Li-ion battery</b> (includes rubber feet and speaker grilles)	698943-001

## Miscellaneous parts

Component	Spare part number
<b>AC adapter:</b>	
65-W HP Smart AC adapter (RC, V, EM, 3-wire)	693710-001
45-W HP Smart AC adapter (RC, V, non-PFC, 3-wire)	696694-001
<b>Digitizer pen</b>	716746-001
<b>Power cord</b> (3-pin, black, 1.83-m):	
For use in Australia	490371-011
For use in Brazil	490371-202
For use in Denmark	490371-081
For use in Europe	490371-021
For use in Israel	490371-BB1
For use in Italy	490371-061
For use in Japan	490371-291
For use in North America	490371-001
For use in the People's Republic China	490371-AA1
For use in South Korea	490371-AD1

<b>Component</b>	<b>Spare part number</b>
For use in Switzerland	490371-111
For use in Taiwan	490371-AB1
For use in Thailand	490371-201
For use in the United Kingdom and Singapore	490371-031
<b>Screw Kit</b>	713745-001

## Sequential part number listing

<b>Spare part number</b>	<b>Description</b>
490371-001	Power cord for use in North America (3-pin, black, 1.83-m)
490371-011	Power cord for use in Australia (3-pin, black, 1.83-m)
490371-021	Power cord for use in Europe (3-pin, black, 1.83-m)
490371-031	Power cord for use in the United Kingdom and Singapore (3-pin, black, 1.83-m)
490371-061	Power cord for use in Italy (3-pin, black, 1.83-m)
490371-081	Power cord for use in Denmark (3-pin, black, 1.83-m)
490371-111	Power cord for use in Switzerland (3-pin, black, 1.83-m)
490371-201	Power cord for use in Thailand (3-pin, black, 1.83-m)
490371-202	Power cord for use in Brazil (3-pin, black, 1.83-m)
490371-291	Power cord for use in Japan (3-pin, black, 1.83-m)
490371-AA1	Power cord for use in the People's Republic of China (3-pin, black, 1.83-m)
490371-AB1	Power cord for use in Taiwan (3-pin, black, 1.83-m)
490371-AD1	Power cord for use in South Korea (3-pin, black, 1.83-m)
490371-BB1	Power cord for use in Israel (3-pin, black, 1.83-m)
670292-001	Intel Centrino Advanced-N 6235 Combo Adapter
691740-001	4-GB memory module (PC3L, 12800, 1600-MHz)
693374-001	8-GB memory module (PC3L, 12800, 1600-MHz)
693710-001	65-W HP Smart AC adapter (RC, V, EM, 3-wire)
695915-001	Intel Centrino Advanced-N 6205 Combo Adapter
696694-001	45-W HP Smart AC adapter (RC, V, non-PFC, 3-wire)
698943-001	6-cell, 44-Wh, 1.98-Ah, Li-ion battery (includes rubber feet and speaker grilles)
702080-001	HP un2430 EV-DO/HSPA Mini Card
710788-001	HP hs2350 HSPA+ Mobile Broadband Module

<b>Spare part number</b>	<b>Description</b>
716731-001	System board equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 7 operating system (includes processor, replacement thermal material, and RTC battery)
716731-501	System board equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system (includes processor, replacement thermal material, and RTC battery)
716731-601	System board equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system (includes processor, replacement thermal material, and RTC battery)
716732-001	System board equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 7 operating system (includes processor, replacement thermal material, and RTC battery)
716732-501	System board equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system (includes processor, replacement thermal material, and RTC battery)
716732-601	System board equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system (includes processor, replacement thermal material, and RTC battery)
716733-001	System board equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 7 operating system (includes processor, replacement thermal material, and RTC battery)
716733-501	System board equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system (includes processor, replacement thermal material, and RTC battery)
716733-601	System board equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system (includes processor, replacement thermal material, and RTC battery)
716734-001	11.6-in, AntiGlare (1366x768), HD, UWVA display assembly (includes display hinge, microphones, webcam, and Windows button)
716735-001	Button board (includes cable)
716736-001	Fan/heat sink assembly (includes replacement thermal material)
716737-001	Service cover (includes 4 captive retention screws and 2 rubber feet)
716738-001	NFC board (includes cable)
716739-001	Bottom cover (includes battery release latch, NFC board antenna cable, power connector cover, and RJ-45 jack cover)
716740-001	Speaker Kit (includes left and right speakers and cables)
716741-001	Top cover (includes display lid switch actuator magnets, orientation lock switch actuator, power switch actuator, TouchPad, and TouchPad cable)
716742-001	RTC battery (includes cable and double-sided adhesive)
716743-001	Hinge cover (includes hinge cap, WWAN antenna cables and transceivers, and WWAN antenna cable shield)
716744-001	Plastics/Rubber Kit (includes 4 service cover rubber screw covers and micro SD Card bezel)

<b>Spare part number</b>	<b>Description</b>
716745-001	Screw Kit
716746-001	Digitizer pen
716747-001	Keyboard with backlight for use in the United States (includes backlight cable and keyboard cable)
716747-031	Keyboard with backlight for use in the United Kingdom and Singapore (includes backlight cable and keyboard cable)
716747-041	Keyboard with backlight for use in France (includes backlight cable and keyboard cable)
716747-051	Keyboard with backlight for use in Germany (includes backlight cable and keyboard cable)
716747-061	Keyboard with backlight for use in Italy (includes backlight cable and keyboard cable)
716747-071	Keyboard with backlight for use in Spain (includes backlight cable and keyboard cable)
716747-081	Keyboard with backlight for use in Denmark (includes backlight cable and keyboard cable)
716747-091	Keyboard with backlight for use in Norway (includes backlight cable and keyboard cable)
716747-131	Keyboard with backlight for use in Portugal (includes backlight cable and keyboard cable)
716747-141	Keyboard with backlight for use in Turkey (includes backlight cable and keyboard cable)
716747-151	Keyboard with backlight for use in Greece (includes backlight cable and keyboard cable)
716747-161	Keyboard with backlight for use in Latin America (includes backlight cable and keyboard cable)
716747-171	Keyboard with backlight for use in Saudi Arabia (includes backlight cable and keyboard cable)
716747-201	Keyboard with backlight for use in Brazil (includes backlight cable and keyboard cable)
716747-211	Keyboard with backlight for use in Hungary (includes backlight cable and keyboard cable)
716747-251	Keyboard with backlight for use in Russia (includes backlight cable and keyboard cable)
716747-261	Keyboard with backlight for use in Bulgaria (includes backlight cable and keyboard cable)
716747-271	Keyboard with backlight for use in Romania (includes backlight cable and keyboard cable)
716747-281	Keyboard with backlight for use in Thailand (includes backlight cable and keyboard cable)
716747-291	Keyboard with backlight for use in Japan (includes backlight cable and keyboard cable)
716747-A41	Keyboard with backlight for use in Belgium (includes backlight cable and keyboard cable)
716747-AB1	Keyboard with backlight for use in Taiwan (includes backlight cable and keyboard cable)
716747-AD1	Keyboard with backlight for use in South Korea (includes backlight cable and keyboard cable)
716747-B31	Keyboard with backlight for use in the Netherlands (includes backlight cable and keyboard cable)
716747-B71	Keyboard with backlight for use in Sweden and Finland (includes backlight cable and keyboard cable)
716747-BA1	Keyboard with backlight for use in Slovenia (includes backlight cable and keyboard cable)
716747-BB1	Keyboard with backlight for use in Israel (includes backlight cable and keyboard cable)
716747-BG1	Keyboard with backlight for use in Switzerland (includes backlight cable and keyboard cable)
716747-D61	Keyboard with backlight for use in India (includes backlight cable and keyboard cable)



<b>Spare part number</b>	<b>Description</b>
716747-DD1	Keyboard with backlight for use in Canada (includes backlight cable and keyboard cable)
716747-FL1	Keyboard with backlight for use in the Czech Republic and Slovakia (includes backlight cable and keyboard cable)
716747-FP1	Keyboard with backlight for use in Northwest Africa (includes backlight cable and keyboard cable)
716748-001	128-GB solid-state drive
716749-001	256-GB solid-state drive

---

# 4 Removal and replacement procedures

## Preliminary replacement requirements

### Tools required

You will need the following tools to complete the removal and replacement procedures:

- Flat-bladed screw driver
- Magnetic screw driver
- Phillips P0 and P1 screw drivers
- Torx T8 screw driver

### Service considerations

The following sections include some of the considerations that you must keep in mind during disassembly and assembly procedures.



**NOTE:** As you remove each subassembly from the computer, place the subassembly (and all accompanying screws) away from the work area to prevent damage.

---

### Plastic parts



**CAUTION:** Using excessive force during disassembly and reassembly can damage plastic parts. Use care when handling the plastic parts. Apply pressure only at the points designated in the maintenance instructions.

---

## Cables and connectors

---

**⚠ CAUTION:** When servicing the computer, be sure that cables are placed in their proper locations during the reassembly process. Improper cable placement can damage the computer.

---

Cables must be handled with extreme care to avoid damage. Apply only the tension required to unseat or seat the cables during removal and insertion. Handle cables by the connector whenever possible. In all cases, avoid bending, twisting, or tearing cables. Be sure that cables are routed in such a way that they cannot be caught or snagged by parts being removed or replaced. Handle flex cables with extreme care; these cables tear easily.

## Drive handling

---

**⚠ CAUTION:** Drives are fragile components that must be handled with care. To prevent damage to the computer, damage to a drive, or loss of information, observe these precautions:

---

Before removing or inserting a hard drive, shut down the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.

Before handling a drive, be sure that you are discharged of static electricity. While handling a drive, avoid touching the connector.

Before removing a diskette drive or optical drive, be sure that a diskette or disc is not in the drive and be sure that the optical drive tray is closed.

Handle drives on surfaces covered with at least one inch of shock-proof foam.

Avoid dropping drives from any height onto any surface.

After removing a hard drive, an optical drive, or a diskette drive, place it in a static-proof bag.

Avoid exposing an internal hard drive to products that have magnetic fields, such as monitors or speakers.

Avoid exposing a drive to temperature extremes or liquids.

If a drive must be mailed, place the drive in a bubble pack mailer or other suitable form of protective packaging and label the package "FRAGILE."

---

# Grounding guidelines

## Electrostatic discharge damage

Electronic components are sensitive to electrostatic discharge (ESD). Circuitry design and structure determine the degree of sensitivity. Networks built into many integrated circuits provide some protection, but in many cases, ESD contains enough power to alter device parameters or melt silicon junctions.

A discharge of static electricity from a finger or other conductor can destroy static-sensitive devices or microcircuitry. Even if the spark is neither felt nor heard, damage may have occurred.

An electronic device exposed to ESD may not be affected at all and can work perfectly throughout a normal cycle. Or the device may function normally for a while, then degrade in the internal layers, reducing its life expectancy.

**⚠ CAUTION:** To prevent damage to the computer when you are removing or installing internal components, observe these precautions:

Keep components in their electrostatic-safe containers until you are ready to install them.

Before touching an electronic component, discharge static electricity by using the guidelines described in this section.

Avoid touching pins, leads, and circuitry. Handle electronic components as little as possible.

If you remove a component, place it in an electrostatic-safe container.

The following table shows how humidity affects the electrostatic voltage levels generated by different activities.

**⚠ CAUTION:** A product can be degraded by as little as 700 V.

Typical electrostatic voltage levels			
Event	Relative humidity		
	10%	40%	55%
Walking across carpet	35,000 V	15,000 V	7,500 V
Walking across vinyl floor	12,000 V	5,000 V	3,000 V
Motions of bench worker	6,000 V	800 V	400 V
Removing DIPS from plastic tube	2,000 V	700 V	400 V
Removing DIPS from vinyl tray	11,500 V	4,000 V	2,000 V
Removing DIPS from Styrofoam	14,500 V	5,000 V	3,500 V
Removing bubble pack from PCB	26,500 V	20,000 V	7,000 V
Packing PCBs in foam-lined box	21,000 V	11,000 V	5,000 V

## Packaging and transporting guidelines

Follow these grounding guidelines when packaging and transporting equipment:

- To avoid hand contact, transport products in static-safe tubes, bags, or boxes.
- Protect ESD-sensitive parts and assemblies with conductive or approved containers or packaging.
- Keep ESD-sensitive parts in their containers until the parts arrive at static-free workstations.
- Place items on a grounded surface before removing items from their containers.
- Always be properly grounded when touching a component or assembly.
- Store reusable ESD-sensitive parts from assemblies in protective packaging or nonconductive foam.
- Use transporters and conveyors made of antistatic belts and roller bushings. Be sure that mechanized equipment used for moving materials is wired to ground and that proper materials are selected to avoid static charging. When grounding is not possible, use an ionizer to dissipate electric charges.

## Workstation guidelines

Follow these grounding workstation guidelines:

- Cover the workstation with approved static-shielding material.
- Use a wrist strap connected to a properly grounded work surface and use properly grounded tools and equipment.
- Use conductive field service tools, such as cutters, screw drivers, and vacuums.
- When fixtures must directly contact dissipative surfaces, use fixtures made only of static-safe materials.
- Keep the work area free of nonconductive materials, such as ordinary plastic assembly aids and Styrofoam.
- Handle ESD-sensitive components, parts, and assemblies by the case or PCM laminate. Handle these items only at static-free workstations.
- Avoid contact with pins, leads, or circuitry.
- Turn off power and input signals before inserting or removing connectors or test equipment.

## Equipment guidelines

Grounding equipment must include either a wrist strap or a foot strap at a grounded workstation.

- When seated, wear a wrist strap connected to a grounded system. Wrist straps are flexible straps with a minimum of one megohm  $\pm 10\%$  resistance in the ground cords. To provide proper ground, wear a strap snugly against the skin at all times. On grounded mats with banana-plug connectors, use alligator clips to connect a wrist strap.
- When standing, use foot straps and a grounded floor mat. Foot straps (heel, toe, or boot straps) can be used at standing workstations and are compatible with most types of shoes or boots. On conductive floors or dissipative floor mats, use foot straps on both feet with a minimum of one megohm resistance between the operator and ground. To be effective, the conductive must be worn in contact with the skin.

The following grounding equipment is recommended to prevent electrostatic damage:

- Antistatic tape
- Antistatic smocks, aprons, and sleeve protectors
- Conductive bins and other assembly or soldering aids
- Nonconductive foam
- Conductive tabletop workstations with ground cords of one megohm resistance
- Static-dissipative tables or floor mats with hard ties to the ground
- Field service kits
- Static awareness labels
- Material-handling packages
- Nonconductive plastic bags, tubes, or boxes
- Metal tote boxes
- Electrostatic voltage levels and protective materials

The following table lists the shielding protection provided by antistatic bags and floor mats.

<b>Material</b>	<b>Use</b>	<b>Voltage protection level</b>
Antistatic plastics	Bags	1,500 V
Carbon-loaded plastic	Floor mats	7,500 V
Metallized laminate	Floor mats	5,000 V


# Component replacement procedures

This chapter provides removal and replacement procedures.

There are as many as 39 screws that must be removed, replaced, and/or loosened when servicing the computer. Make special note of each screw size and location during removal and replacement.

## Service tag

When ordering parts or requesting information, provide the computer serial number and model number provided on the service tag. It is necessary to remove the battery to obtain these numbers. See [Battery on page 33](#) for battery removal instructions.

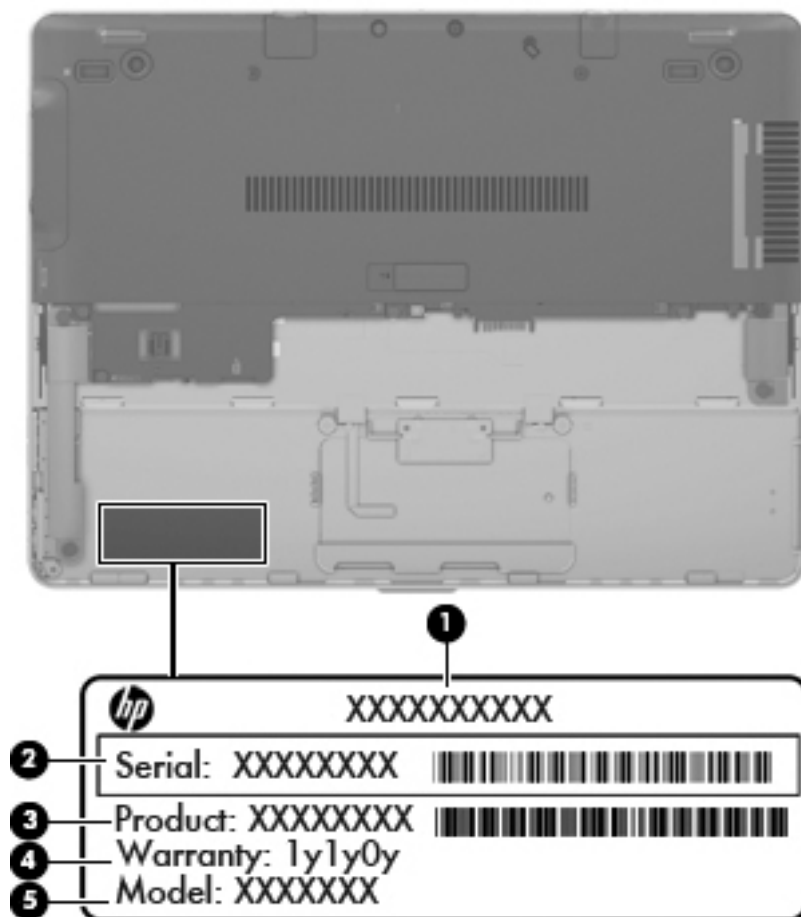

Item	Component	Description
(1)	Product name	This is the product name affixed to the front of the computer.
(2)	Serial number (s/n)	This is an alphanumeric identifier that is unique to each product.

<b>Item</b>	<b>Component</b>	<b>Description</b>
<b>(3)</b>	Part number/Product number (p/n)	This number provides specific information about the product's hardware components. The part number helps a service technician determine what components and parts are needed.
<b>(4)</b>	Warranty period	This number describes the duration of the warranty period for the computer.
<b>(5)</b>	Model description	This is the alphanumeric identifier used to locate documents, drivers, and support for the computer.



## Battery

Description	Spare part number
6-cell, 44-Wh, 1.98-Ah, Li-ion battery (includes rubber feet and speaker grilles)	698943-001


Before removing the battery, follow these steps:

**⚠ CAUTION:** Removing a battery that is the sole power source for the computer can cause loss of information. To prevent loss of information, save your work and initiate Hibernation or shut down the computer through Windows before removing the battery.

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.

Remove the battery:

1. Turn the computer upside down on a flat surface, with the battery bay toward you.
2. Slide the battery release latch **(1)** to release the battery.
3. Pivot the battery up and then remove the battery from the computer **(2)**.

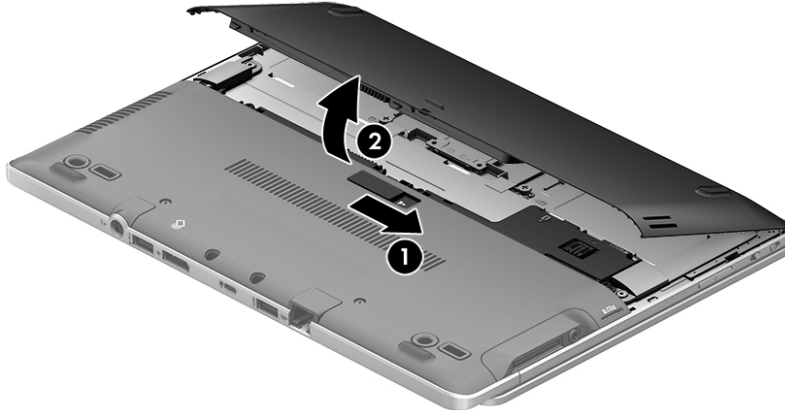

To insert the battery:

1. Turn the computer upside down on a flat surface, with the battery bay toward you.
2. Insert the battery at a 45-degree angle into the battery bay until it is seated.
3. Pivot the battery downwards until it is seated.

The battery release latch automatically locks the battery into place.

## Service cover

Description	Spare part number
Service cover (includes 4 captive retention screws and 2 rubber feet)	716737-001

Before removing the service cover, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).

Remove the service cover:


1. Turn the computer upside down, with the front toward you.
2. Press on the micro SD Card bezel **(1)** once to release the bezel, and then press on the bezel again to remove the bezel.

The micro SD Card bezel is included in the Plastics/Rubber Kit, spare part number 716744-001.


3. Remove the two large rubber screw covers **(2)**.
4. Remove the two Phillips PM2.0×6.5 screws **(3)** that secure the service cover to the computer.
5. Remove the two small rubber screw covers **(4)**.

The large and small rubber screw covers are included in the Plastics/Rubber Kit, spare part number 716744-001.

6. Remove the two Phillips PM2.0×8.5 screws **(5)** that secure the service cover to the computer.

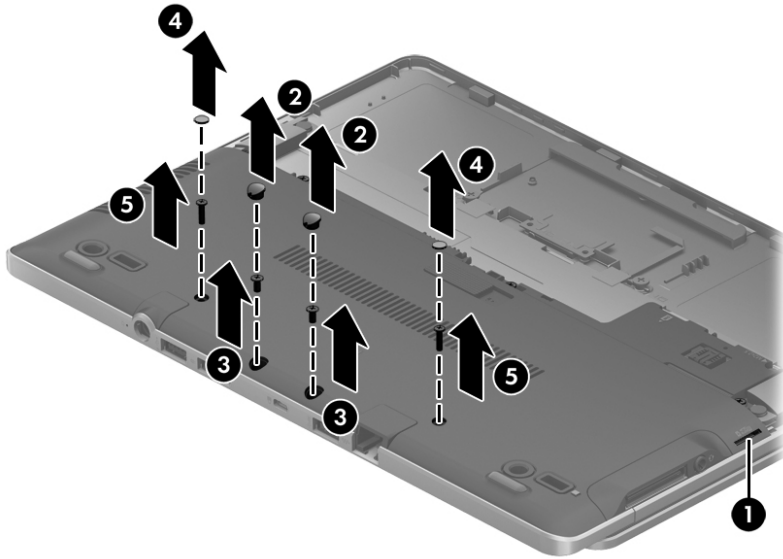


7. Loosen the four captive Phillips screws **(1)** that secure the service cover to the computer.
8. Lift the front edge of the service cover **(2)** until the cover detaches from the computer, and then remove the service cover **(3)** from the computer.

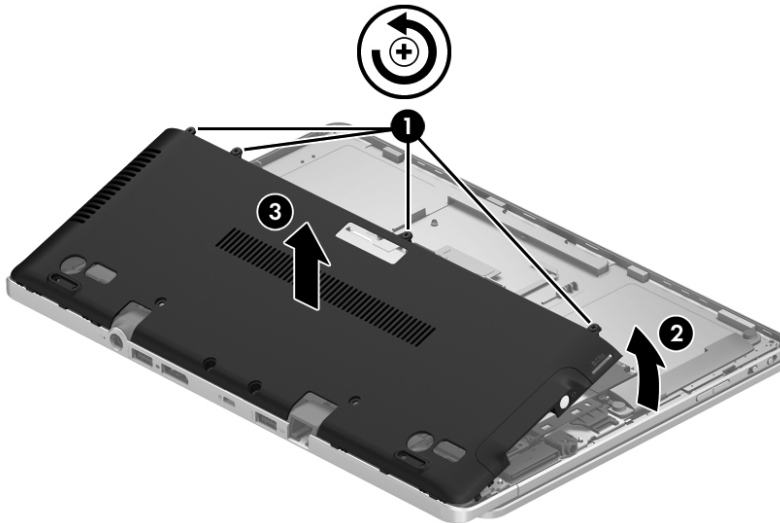

Reverse this procedure to install the service cover.

## WWAN module

Description	Spare part number
HP un2430 EV-DO/HSPA Mini Card	702080-001
HP hs2350 HSPA+ Mobile Broadband Module	710788-001

 **CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WWAN module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).
5. Remove the service cover (see [Service cover on page 34](#)).

Remove the WWAN module:


1. Disconnect the WWAN antenna cables **(1)** from the terminals on the WWAN module.




**NOTE:** The WWAN antenna cable labeled “5” connects to the WWAN module “Main” terminal. The WWAN antenna cable labeled “6” connects to the WWAN module “Aux” terminal.

2. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the WWAN module to the computer. (The WWAN module tilts up.)

3. Remove the WWAN module (3) by pulling the module away from the slot at an angle.

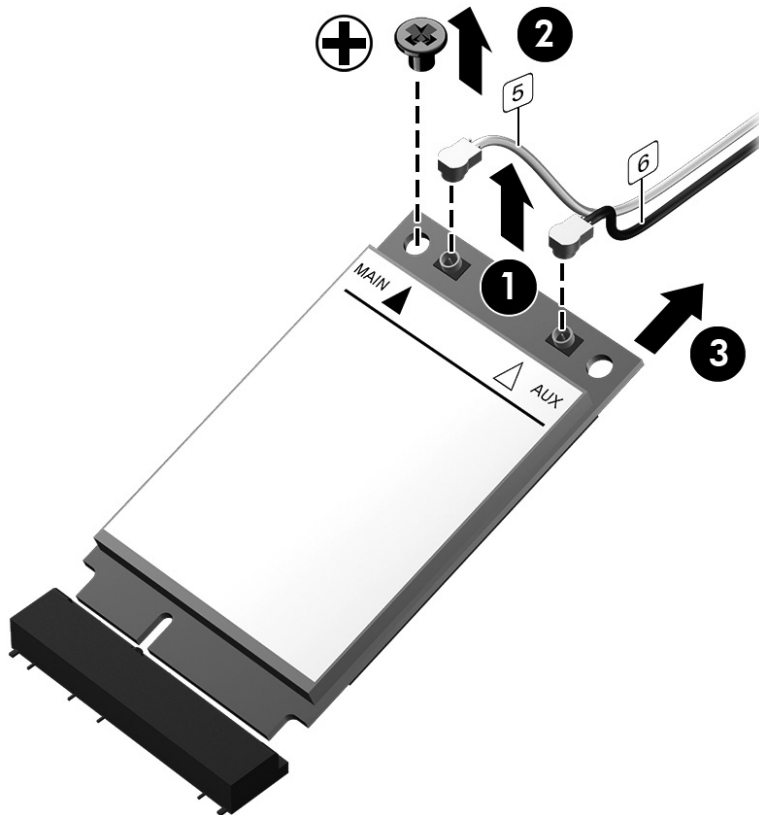


**NOTE:** If the WWAN antenna cables are not connected to the terminals on the WWAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.

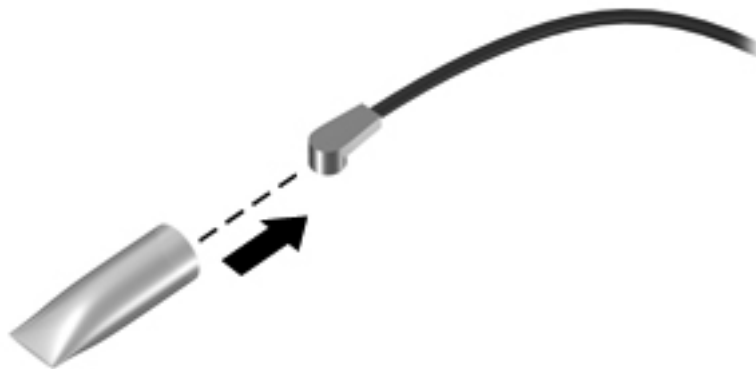

Reverse this procedure to install the WWAN module.

## WLAN module

Description	Spare part number
Intel Centrino Advanced-N 6235 Combo Adapter	670292-001
Intel Centrino Advanced-N 6205 Combo Adapter	695915-001

 **CAUTION:** To prevent an unresponsive system, replace the wireless module only with a wireless module authorized for use in the computer by the governmental agency that regulates wireless devices in your country or region. If you replace the module and then receive a warning message, remove the module to restore device functionality, and then contact technical support.

Before removing the WLAN module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).
5. Remove the service cover (see [Service cover on page 34](#)).

Remove the WLAN module:


1. Disconnect the WLAN antenna cables **(1)** from the terminals on the WLAN module.




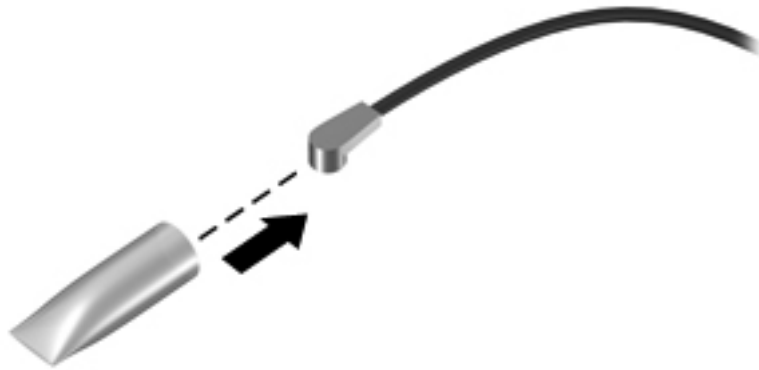
**NOTE:** The WLAN antenna cable labeled "1" connects to the WLAN module "Main" terminal. The WLAN antenna cable labeled "2" connects to the WLAN module "Aux" terminal.

2. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the WLAN module to the computer. (The WLAN module tilts up.)

3. Remove the WLAN module (3) by pulling the module away from the slot at an angle.

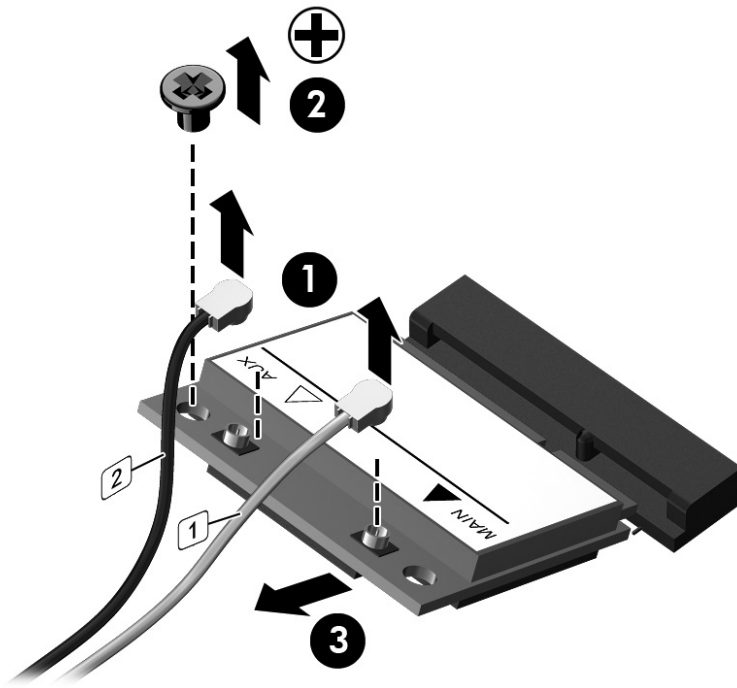

 **NOTE:** If the WLAN antenna cables are not connected to the terminals on the WLAN module, the protective sleeves must be installed on the antenna connectors, as shown in the following illustration.



Reverse this procedure to install the WLAN module.

## Solid-state drive


Description	Spare part number
256-GB	716749-001
128-GB	716748-001

Before removing the solid-state drive, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).
5. Remove the service cover (see [Service cover on page 34](#)).

Remove the solid-state drive:

1. Remove the Phillips PM2.0×3.0 screw **(1)** that secures the solid-state drive to the computer. (The solid-state drive tilts up.)
2. Remove the solid-state drive **(2)** by pulling the drive away from the slot at an angle.

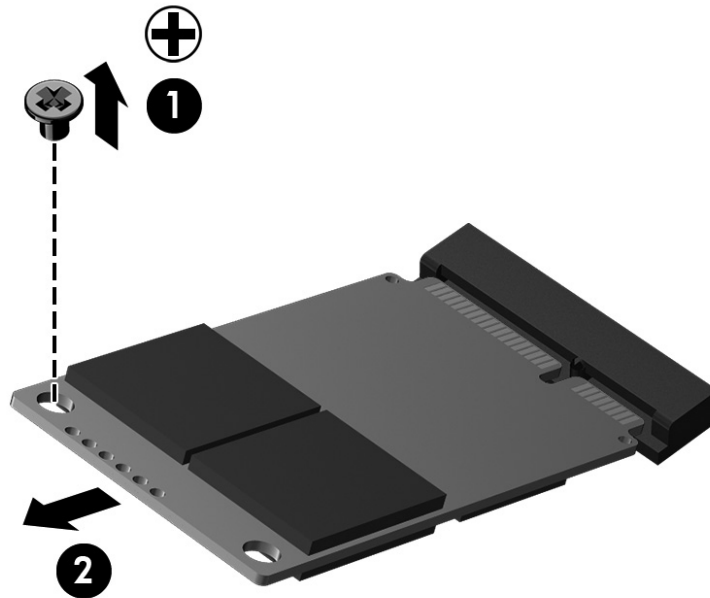

Reverse this procedure to install the solid-state drive.



## Memory module

Description	Spare part number
8-GB (PC3L, 12800, 1600-MHz)	693374-001
4-GB (PC3L, 12800, 1600-MHz)	691740-001

### Update BIOS before adding memory modules

Before adding new memory, make sure you update the computer to the latest BIOS.

**CAUTION:** Failure to update the computer to the latest BIOS prior to installing new memory may result in various system problems.

To update BIOS:

1. Navigate to [www.hp.com](http://www.hp.com).
2. Click **Support & Drivers > click Drivers & Software**.
3. In the **Enter a product name/number box**, type the computer model information, and then click **Search**.
4. Click the link for the computer model.
5. Select the operating system, and then click **Next**.
6. Under **Step 2: Select a Download**, click the **BIOS** link.
7. Click the link for the most recent BIOS.
8. Click the **Download** button, and then follow the on-screen instructions.


Before removing a memory module, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).
5. Remove the service cover (see [Service cover on page 34](#)).

Remove the memory module:

1. Spread the retaining tabs **(1)** on each side of the memory module slot to release the memory module. (The memory module tilts up.)

2. Remove the memory module **(2)** by pulling the module away from the slot at an angle.

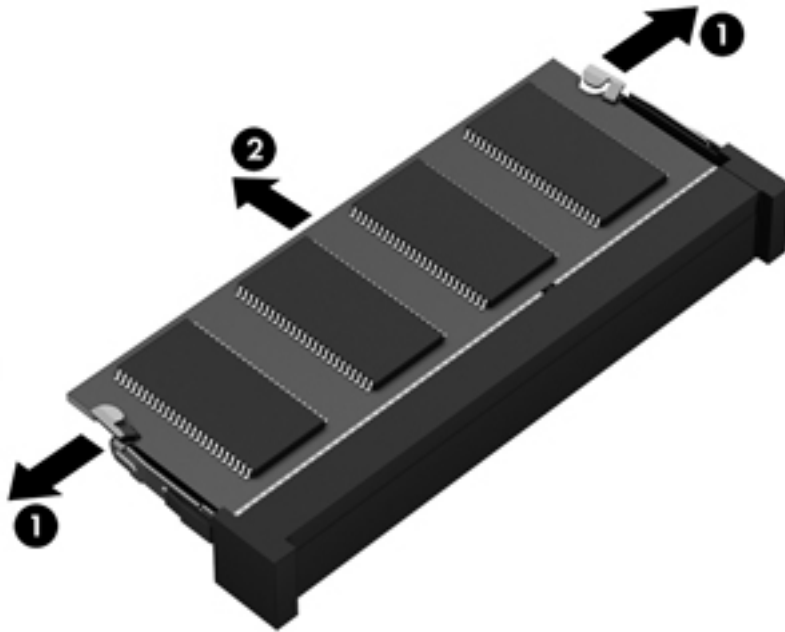

Reverse this procedure to install a memory module.

## NFC board


Description	Spare part number
NFC board (includes NFC board cable)	716738-001

Before removing the NFC board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).
5. Remove the service cover (see [Service cover on page 34](#)).

Remove the NFC board:

1. Disconnect the NFC antenna cable **(1)** from the NFC board.  
The NFC antenna cable is included in the bottom cover spare part kit, spare part number .
2. Release the zero insertion force (ZIF) connector **(2)** to which the NFC board cable is attached, and then disconnect the NFC board cable from the system board.
3. Detach the NFC board cable **(3)** from the bottom cover. (The NFC board cable is attached to the bottom cover with double-sided tape.)
4. Remove the Phillips PM1.5×2.0 screw **(4)** that secures the NFC board to the bottom cover.
5. Remove the NFC board **(5)** and cable.

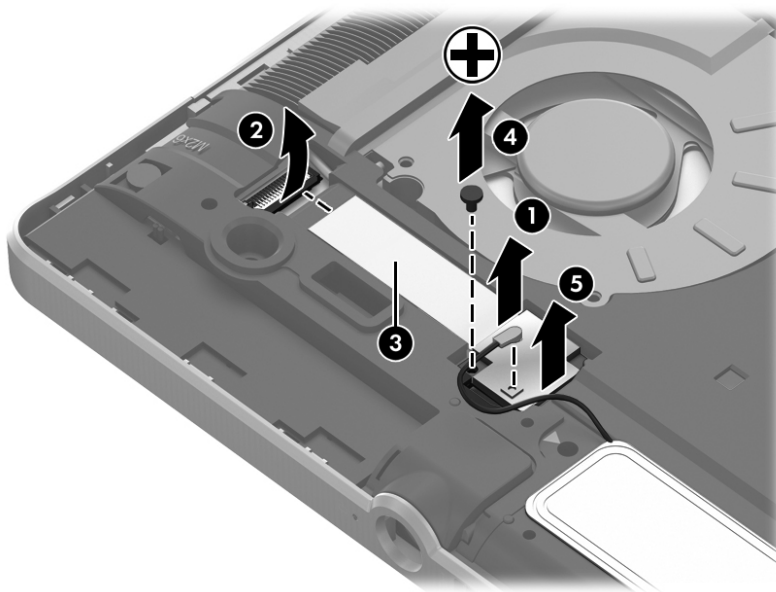

Reverse this procedure to install the NFC board.

## Keyboard



**NOTE:** The keyboard spare part kit includes a backlight cable, keyboard, and keyboard cable.


For use in country/region	Spare part number	For use in country/region	Spare part number
For use in Belgium	716747-A41	For use in Norway	716747-091
For use in Brazil	716747-201	For use in Northwest Africa	716747-FP1
For use in Bulgaria	716747-261	For use in Portugal	716747-131
For use in Canada	716747-DB1	For use in Romania	716747-271
For use in the Czech Republic and Slovakia	716747-FL1	For use in Russia	716747-251
For use in Denmark	716747-081	For use in Saudi Arabia	716747-171
For use in France	716747-051	For use in Slovenia	716747-BA1
For use in Germany	716747-041	For use in South Korea	716747-AD1
For use in Greece	716747-151	For use in Spain	716747-071
For use in Hungary	716747-211	For use in Sweden and Finland	716747-B71
For use in Iceland	716747-DD1	For use in Switzerland	716747-BG1
For use in India	716747-D61	For use in Taiwan	716747-AB1
For use in Israel	716747-BB1	For use in Thailand	716747-281
For use in Italy	716747-061	For use in Turkey	716747-141
For use in Japan	716747-291	For use in the United Kingdom and Singapore	716747-031
For use in Latin America	716747-161	For use in the United States	716747-001
For use in the Netherlands	716747-B31		

Before removing the keyboard, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).
5. Remove the service cover (see [Service cover on page 34](#)).

Remove the keyboard:

1. Loosen the 2 captive screws that secure the keyboard to the computer.

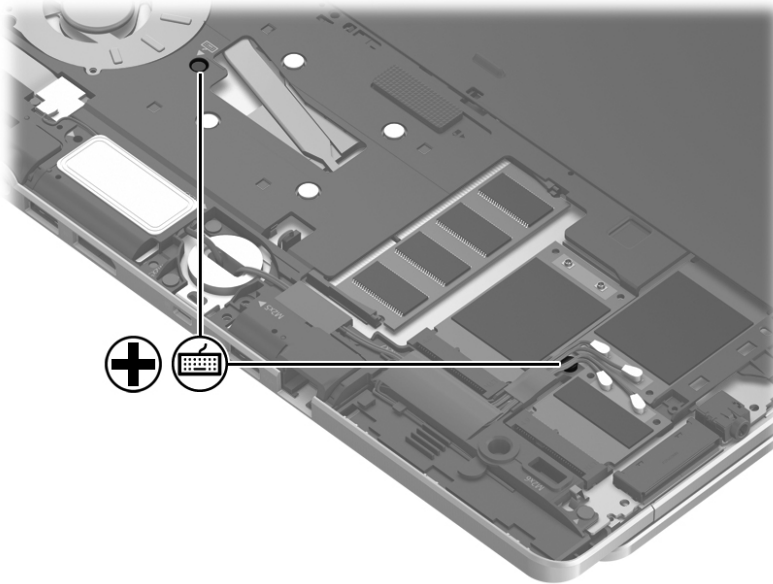

2. Rest and secure the computer on its left side.
3. Partially open the computer.
4. Insert a screw driver or similar thin tool into the keyboard release hole near the fan, and then press on the back of the keyboard until the keyboard disengages from the computer.

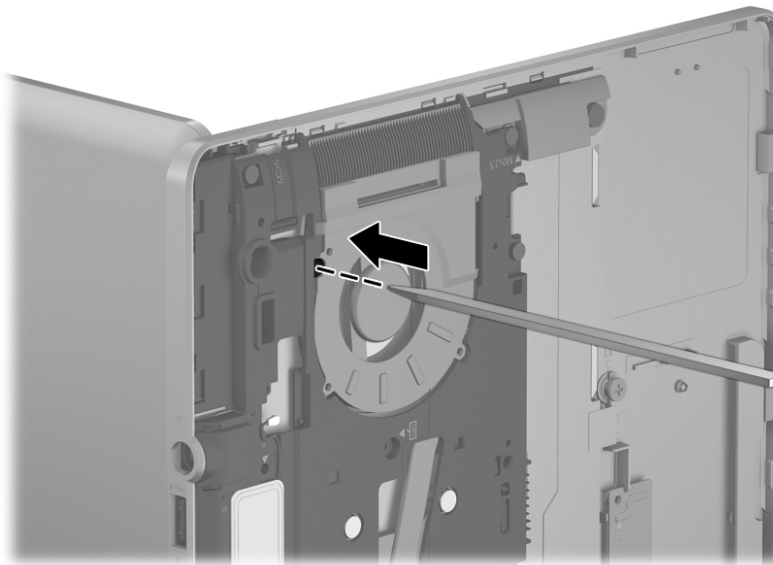


5. Turn the computer right-side up with the front toward you.
6. Open the computer.

7. Lift the rear edge of the keyboard, and then swing the keyboard up and forward until it rests upside down on the palm rest.



8. Release the ZIF connector **(1)** to which the backlight cable is attached, and then disconnect the backlight cable **(2)** from the system board.
9. Release the ZIF connector **(3)** to which the keyboard cable is attached, and then disconnect the keyboard cable **(4)** from the system board.

10. Remove the keyboard (5).

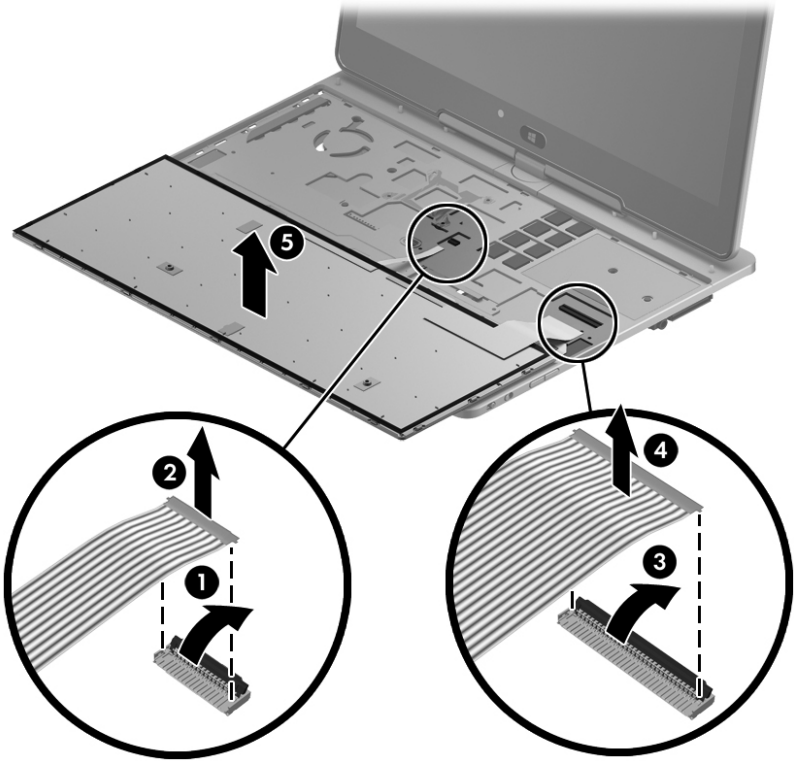

Reverse this procedure to install the keyboard.

## Bottom cover


Description	Spare part number
Bottom cover (includes battery release latch, NFC board antenna cable, power connector cover, and RJ-45 jack cover)	716739-001

Before removing the bottom cover, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)).
5. Remove the service cover (see [Service cover on page 34](#)).
6. Remove the keyboard (see [Keyboard on page 44](#)).

Remove the bottom cover:


1. Remove the two Phillips PM2.0×4.3 screws that secure the bottom cover to the computer.

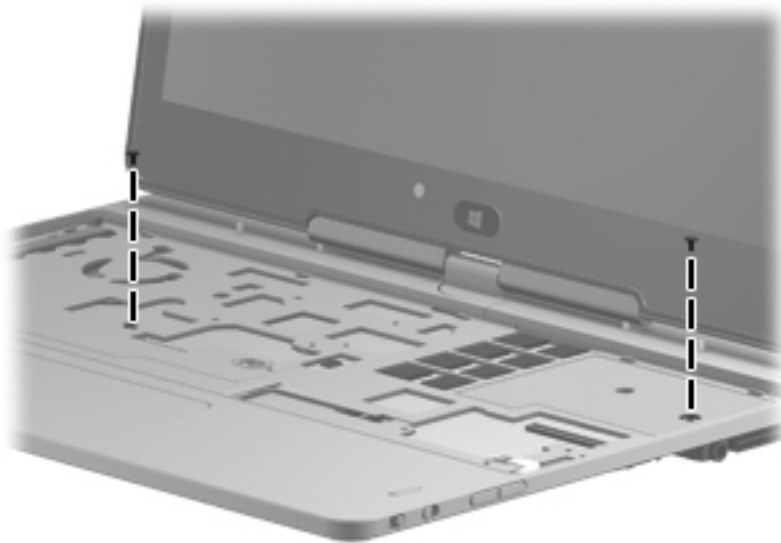


2. Close the computer.
3. Turn the computer upside down, with the rear toward you.
4. Disconnect the microphone cable **(1)** from the system board.




5. Release the tape **(2)** and **(3)** that secures the WWAN antenna cables and the WLAN antenna cables.

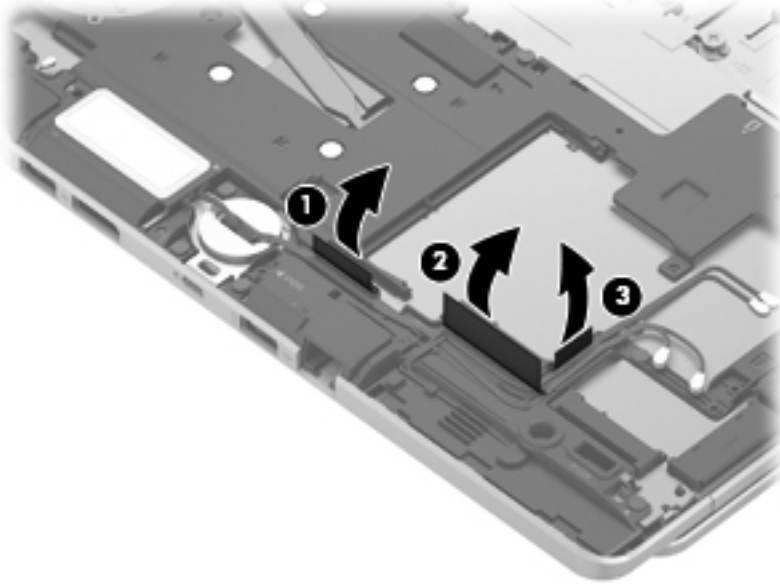

6. Remove the five Torx T8M2.0x5.65 screws **(1)** and the Torx T8M2.0x2.5 screw **(2)** that secure the bottom cover to the computer.

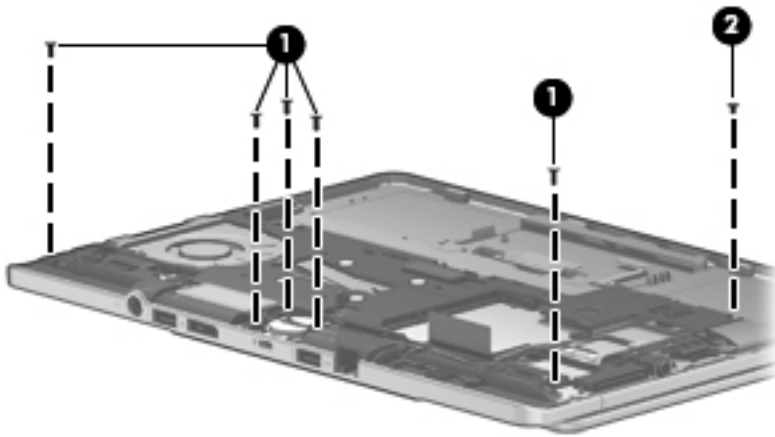

7. Remove the bottom cover.

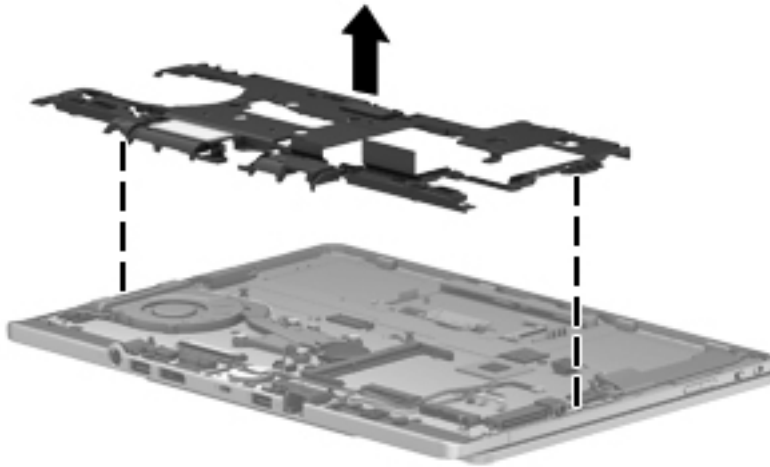

Reverse this procedure to install the bottom cover.

## Speakers

Description	Spare part number
Front speakers (includes left and right speakers, cables, and 4 rubber isolators)	716740-001


Before removing the speakers, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
  - a. Service cover (see [Service cover on page 34](#))
  - b. Keyboard (see [Keyboard on page 44](#))
  - c. Bottom cover (see [Bottom cover on page 48](#))

Remove the speakers:

1. Disconnect the speaker cables **(1)** from the system board.
2. Release the left speaker cable **(2)** from the clips built into the top cover.
3. Remove the three Phillips PM2.0×3.0 broad head screws **(3)** that secure the speakers to the top cover.

4. Remove the speakers (4).

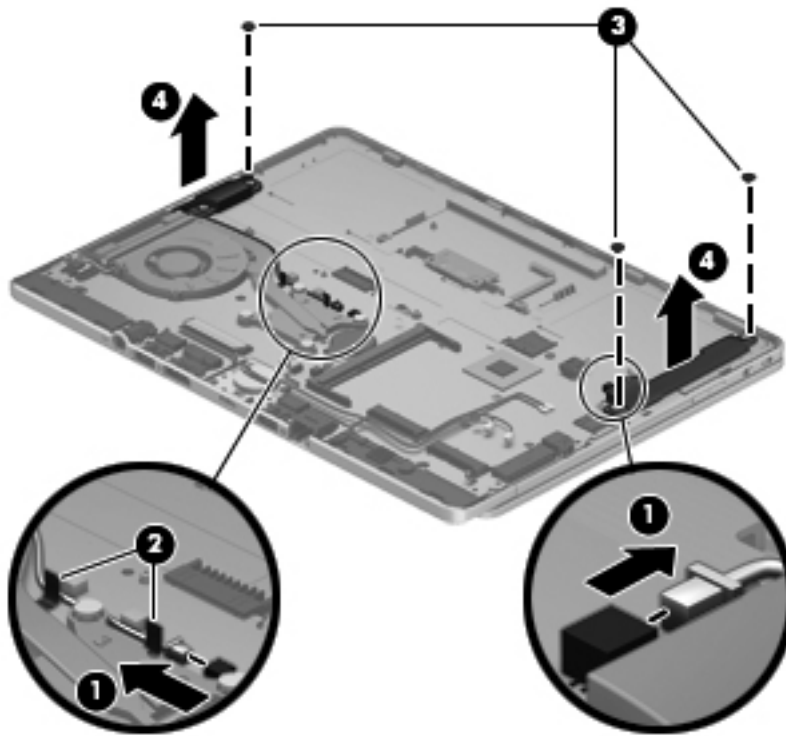

Reverse this procedure to install the speakers.

## Button board


Description	Spare part number
Button board (includes cable)	716735-001

Before removing the button board, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
  - a. Service cover (see [Service cover on page 34](#))
  - b. Keyboard (see [Keyboard on page 44](#))
  - c. Bottom cover (see [Bottom cover on page 48](#))
  - d. Right speaker (see [Speakers on page 50](#))


Remove the button board:

1. Turn the computer right side up, with the front toward you.
2. Open the computer.
3. Release the ZIF connector **(1)** to which the button board cable is attached, and then disconnect the button board cable **(2)** from the system board.

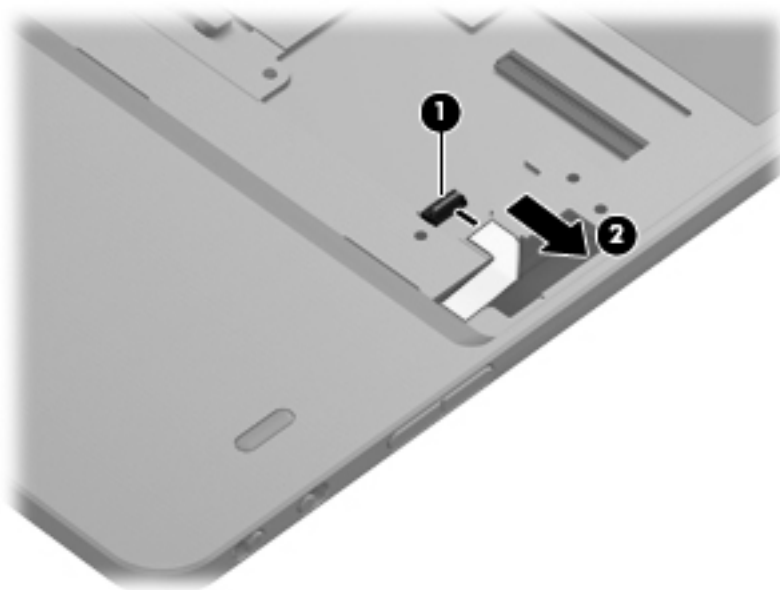


4. Close the computer.

5. Turn the computer upside down, with the rear toward you.
6. Detach the button board **(1)** from the top cover. (The button board cable is attached to the the top cover with double-sided tape.)
7. Remove the Phillips PM2.0×3.0 screw **(2)** that secures the button board to the top cover.
8. Remove the button board **(3)**.

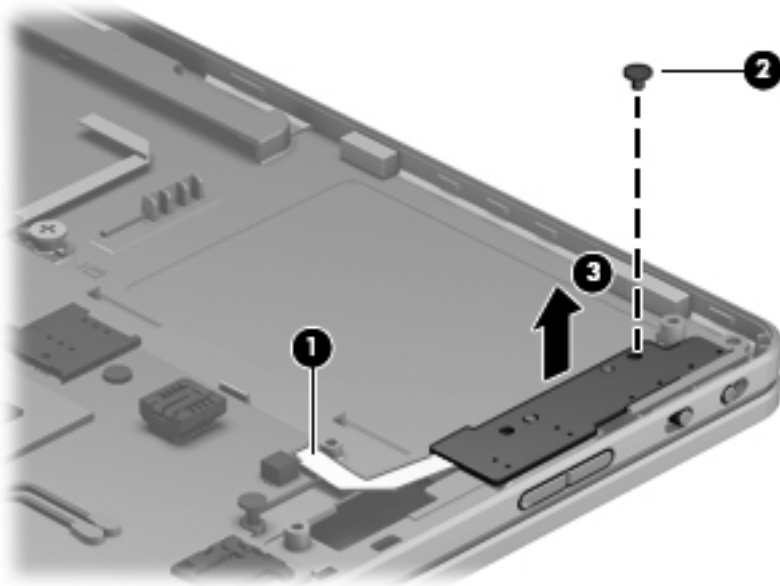

Reverse this procedure to install the button board.

## RTC battery

 **NOTE:** The RTC battery is also included with the system board spare part kit.


Description	Spare part number
RTC battery (includes cable and double-sided adhesive)	716742-001

Before removing the RTC battery, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
  - a. Service cover (see [Service cover on page 34](#))
  - b. Keyboard (see [Keyboard on page 44](#))
  - c. Bottom cover (see [Bottom cover on page 48](#))

Remove the RTC battery:

1. Disconnect the RTC battery cable **(1)** from the system board.
2. Detach the RTC battery **(2)** from the top cover. (The RTC battery is attached to the system board with double-sided tape.)

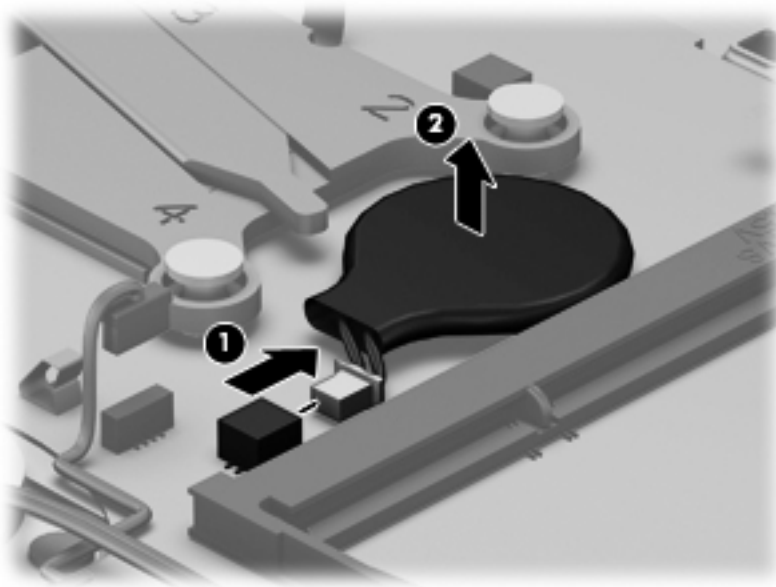

3. Remove the RTC battery.

Reverse this procedure to install the RTC battery.

## Fan/heat sink assembly

Description	Spare part number
Fan/heat sink assembly (includes replacement thermal material)	716736-001


Before removing the fan/heat sink assembly, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
  - a. Service cover (see [Service cover on page 34](#))
  - b. Keyboard (see [Keyboard on page 44](#))
  - c. Bottom cover (see [Bottom cover on page 48](#))


Remove the fan/heat sink assembly:


1. Disconnect the fan cable **(1)** from the system board.
2. Following the 1, 2, 3, 4 sequence stamped into the fan/heat sink assembly, loosen the four captive Phillips PM2.0×6.5 screws **(2)** that secure the fan/heat sink assembly to the system board.

3. Remove the fan/heat sink assembly **(3)**.

 **NOTE:** Due to the adhesive quality of the thermal material located between the fan/heat sink assembly and the system board components, it may be necessary to move the fan/heat sink assembly from side to side to detach it.

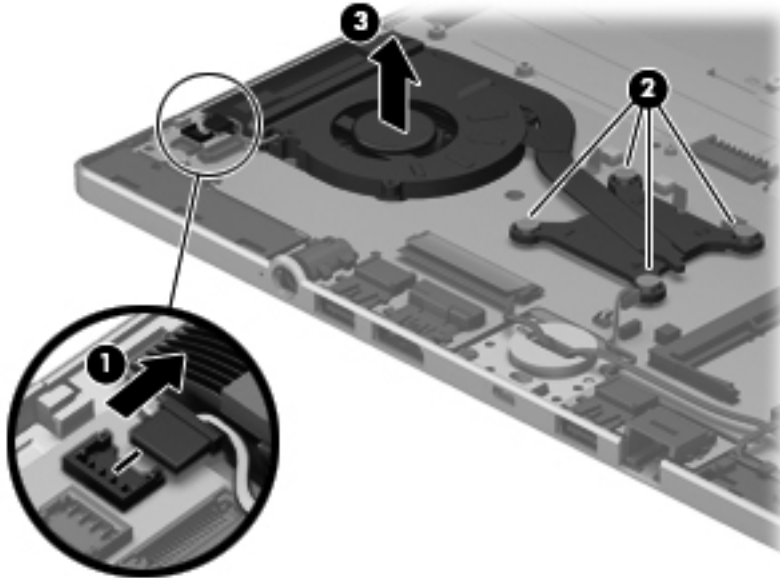

 **NOTE:** The thermal material must be thoroughly cleaned from the surfaces of the fan/heat sink assembly and the processor each time the fan/heat sink assembly is removed. Replacement thermal material is included with the fan/heat sink assembly and system board spare part kits. Thermal paste is used on the processor **(1)** and the section of the fan/heat sink assembly **(2)** that services it.

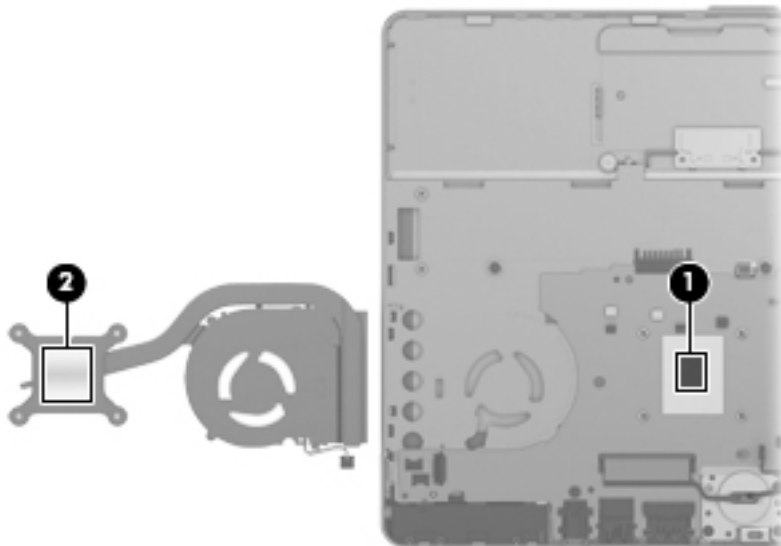

Reverse this procedure to install the fan/heat sink assembly.




## System board

Description	Spare part number
Equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system	716733-601
Equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system	716733-501
Equipped with an Intel Dual Core i7-3687U 2.10-GHz (turbo up to 3.30-GHz), 1600-MHz FSB, 4.00-MB L3 cache, 17 W, and the Windows 7 operating system	716733-001
Equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system	716732-601
Equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system	716732-501
Equipped with an Intel Dual Core i5-3437U 1.90-GHz (turbo up to 2.90-GHz), 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 7 operating system	716732-001
Equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Professional operating system	716731-601
Equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 8 Standard operating system	716731-501
Equipped with an Intel Dual Core i3-3227U 1.90-GHz processor, 1600-MHz FSB, 3.00-MB L3 cache, 17 W, and the Windows 7 operating system	716731-001

Before removing the system board, follow these steps:


1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
  - a. Service cover (see [Service cover on page 34](#))
  - b. WWAN module (see [WWAN module on page 36](#))
  - c. WLAN module (see [WLAN module on page 38](#))
  - d. Solid-state drive (see [Solid-state drive on page 40](#))
  - e. Keyboard (see [Keyboard on page 44](#))
  - f. Bottom cover (see [Bottom cover on page 48](#))
  - g. Right speaker (see [Speakers on page 50](#))
  - h. Fan/heat sink assembly (see [Fan/heat sink assembly on page 55](#))

 **NOTE:** When replacing the system board, be sure that the following components are removed from the defective system board and installed on the replacement system board:

- Memory module (see [Memory module on page 41](#))
- RTC battery (see [RTC battery on page 54](#))


Remove the system board:

1. Turn the computer right side up, with the front toward you.
2. Open the computer.
3. Release the ZIF connector **(1)** to which the TouchPad cable is attached, and then disconnect the TouchPad cable **(2)** from the system board.

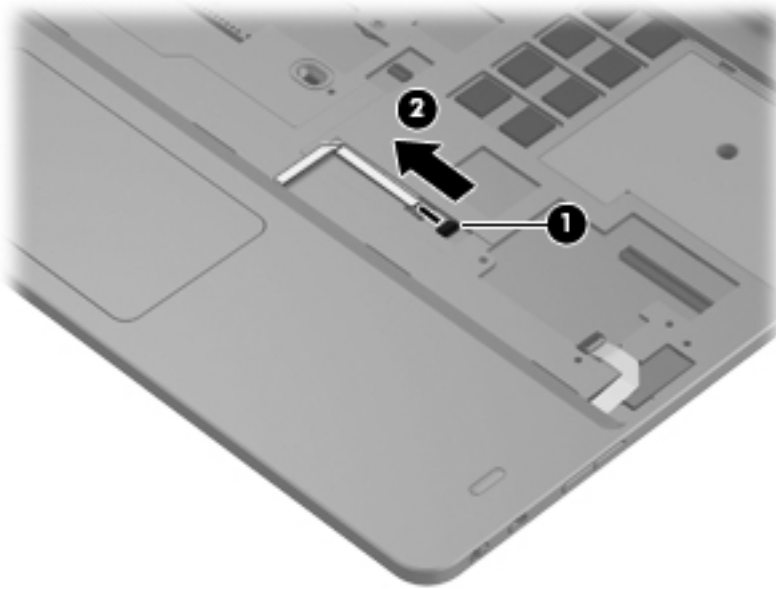

4. Disconnect the display panel cable **(1)** from the system board.
5. Remove the Phillips PM2.0×2.5 screw **(2)** that secures the system board to the top cover.

6. Remove the system board (3).

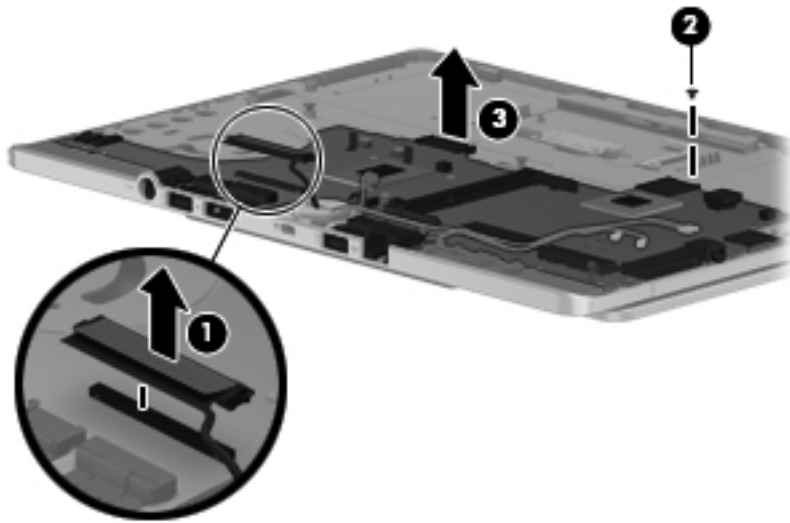

Reverse this procedure to install the system board.

## Hinge cover


Description	Spare part number
Hinge cover (includes hinge cap, WWAN antenna cables and transceivers, and WWAN antenna shield)	716743-001

Before removing the hinge cover, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
  - a. Service cover (see [Service cover on page 34](#))
  - b. WWAN module (see [WWAN module on page 36](#))
  - c. WLAN module (see [WLAN module on page 38](#))
  - d. Solid-state drive (see [Solid-state drive on page 40](#))
  - e. Keyboard (see [Keyboard on page 44](#))
  - f. Bottom cover (see [Bottom cover on page 48](#))
  - g. Fan/heat sink assembly (see [Fan/heat sink assembly on page 55](#))
  - h. System board (see [System board on page 57](#))


Remove the hinge cover:

1. Remove the shield **(1)** that secures the WWAN antenna cables **(2)** in the routing channel built into the top cover.
2. Remove the six Phillips PM2.0×2.5 screws **(2)** that secure the hinge cover to the top cover.

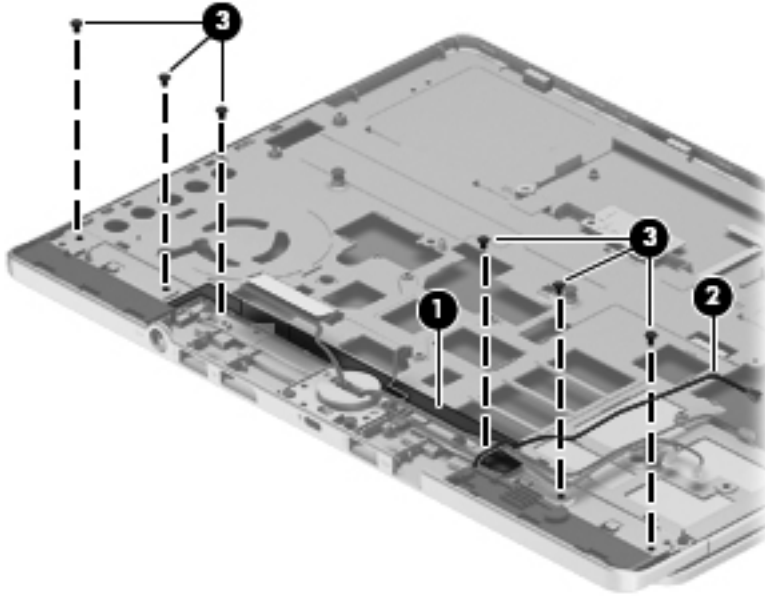

3. Turn the computer right side up, with the front toward you.
4. Open the computer.
5. Rotate the display assembly **(1)** clockwise until it is perpendicular to the computer body.
6. Detach the left **(2)** and right edges of the hinge cover from the computer.
7. Remove the hinge cover **(3)** by sliding it away from the computer.

8. Remove the hinge cap (4).

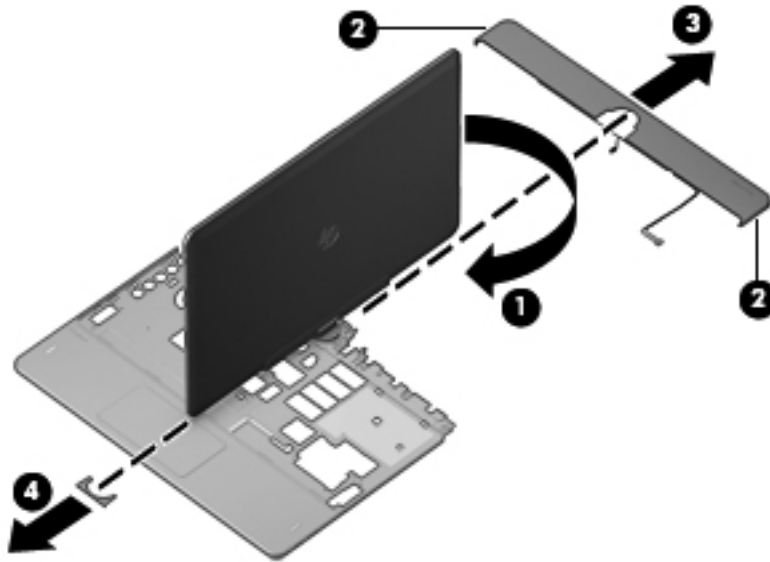

Reverse this procedure to install the hinge cover and hinge cap.

## Display assembly

Description	Spare part number
Hinge cover (includes hinge cap, WWAN antenna cables and transceivers, and WWAN antenna shield)	716743-001


Before removing the display assembly, follow these steps:

1. Turn off the computer. If you are unsure whether the computer is off or in Hibernation, turn the computer on, and then shut it down through the operating system.
2. Disconnect the power from the computer by unplugging the power cord from the computer.
3. Disconnect all external devices from the computer.
4. Remove the battery (see [Battery on page 33](#)), and then remove the following components:
  - a. Service cover (see [Service cover on page 34](#))
  - b. WWAN module (see [WWAN module on page 36](#))
  - c. WLAN module (see [WLAN module on page 38](#))
  - d. Solid-state drive (see [Solid-state drive on page 40](#))
  - e. Keyboard (see [Keyboard on page 44](#))
  - f. Bottom cover (see [Bottom cover on page 48](#))

- g.** Fan/heat sink assembly (see [Fan/heat sink assembly on page 55](#))
- h.** System board (see [System board on page 57](#))
- i.** Hinge cover and hinge cap (see [Hinge cover on page 59](#))

Remove the display assembly:

- 1.** Remove the two Phillips PM2.0×5.0 screws **(1)** that secure the display assembly to the top cover.
- 2.** Slide the display assembly **(2)** away from the top cover and remove it.

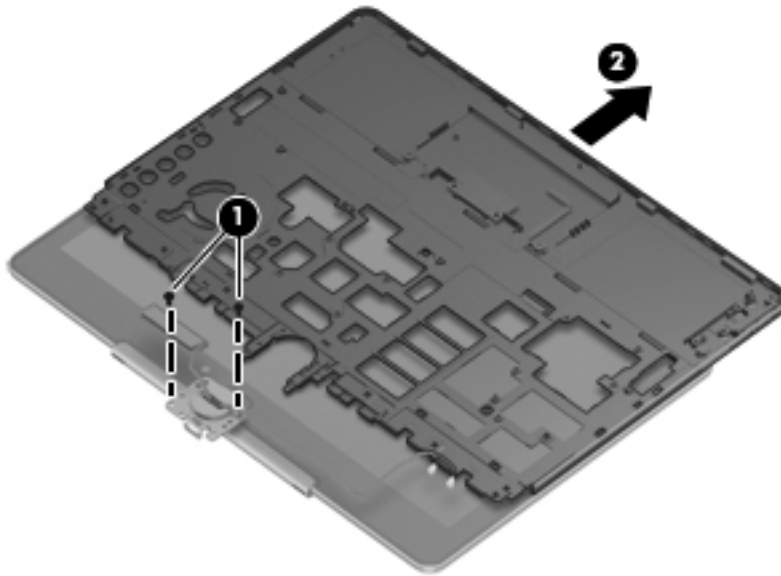

Reverse this procedure to install the display assembly.


---

# 5 Computer Setup (BIOS) and Advanced System Diagnostics

## Using Computer Setup

Computer Setup, or Basic Input/Output System (BIOS), controls communication between all the input and output devices on the system (such as disk drives, display, keyboard, mouse, and printer). Computer Setup includes settings for the types of devices installed, the startup sequence of the computer, and the amount of system and extended memory.


---

 **NOTE:** Use extreme care when making changes in Computer Setup. Errors can prevent the computer from operating properly.

---

## Starting Computer Setup

---

 **NOTE:** An external keyboard or mouse connected to a USB port can be used with Computer Setup only if USB legacy support is enabled.

---

To start Computer Setup, follow these steps:


1. Turn on or restart the computer, and then press `esc` while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press `f10` to enter Computer Setup.

## Navigating and selecting in Computer Setup

To navigate and select in Computer Setup, follow these steps:

1. Turn on or restart the computer, and then press `esc` while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
  - To select a menu or a menu item, use the `tab` key and the keyboard arrow keys and then press `enter`, or use a pointing device to click the item.
  - To scroll up and down, click the up arrow or the down arrow in the upper-right corner of the screen, or use the up arrow key or the down arrow key.
  - To close open dialog boxes and return to the main Computer Setup screen, press `esc`, and then follow the on-screen instructions.

---

 **NOTE:** You can use either a pointing device (TouchPad or USB mouse) or the keyboard to navigate and make selections in Computer Setup.

---

2. Press **f10** to enter Computer Setup.

To exit Computer Setup menus, choose one of the following methods:

- To exit Computer Setup menus without saving your changes:

Click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the **tab** key and the arrow keys to select **File > Ignore Changes and Exit**, and then press **enter**.

- To save your changes and exit Computer Setup menus:

Click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.


– or –

Use the **tab** key and the arrow keys to select **File > Save Changes and Exit**, and then press **enter**.

Your changes go into effect when the computer restarts.

## Restoring factory settings in Computer Setup

---

 **NOTE:** Restoring defaults will not change the hard drive mode.

---

To return all settings in Computer Setup to the values that were set at the factory, follow these steps:


1. Turn on or restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
2. Press **f10** to enter Computer Setup.
3. Use a pointing device or the arrow keys to select **File > Restore Defaults**.
4. Follow the on-screen instructions.
5. To save your changes and exit, click the **Save** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the arrow keys to select **File > Save Changes and Exit**, and then press **enter**.

Your changes go into effect when the computer restarts.

---

 **NOTE:** Your password settings and security settings are not changed when you restore the factory settings.

---



## Updating the BIOS

Updated versions of the BIOS may be available on the HP website.

Most BIOS updates on the HP website are packaged in compressed files called *SoftPaqs*.

Some download packages contain a file named *Readme.txt*, which contains information regarding installing and troubleshooting the file.

## Determining the BIOS version

To determine whether available BIOS updates contain later BIOS versions than those currently installed on the computer, you need to know the version of the system BIOS currently installed.


BIOS version information (also known as *ROM date* and *System BIOS*) can be displayed by pressing **fn** + **esc** (if you are already in Windows) or by using Computer Setup.

1. Start Computer Setup.
2. Use a pointing device or the arrow keys to select **File > System Information**.
3. To exit Computer Setup without saving your changes, click the **Exit** icon in the lower-left corner of the screen, and then follow the on-screen instructions.

– or –

Use the **tab** key and the arrow keys to select **File > Ignore Changes and Exit**, and then press **enter**.

## Downloading a BIOS update

 **CAUTION:** To reduce the risk of damage to the computer or an unsuccessful installation, download and install a BIOS update only when the computer is connected to reliable external power using the AC adapter. Do not download or install a BIOS update while the computer is running on battery power, docked in an optional docking device, or connected to an optional power source. During the download and installation, follow these instructions:


Do not disconnect power on the computer by unplugging the power cord from the AC outlet.

Do not shut down the computer or initiate Sleep.

Do not insert, remove, connect, or disconnect any device, cable, or cord.

1. From the Start screen, select the **HP Support Assistant** app.
2. Select **Updates and tune-ups**, and then select **Check for HP updates now**.
3. At the download area, follow these steps:
  - a. Identify the BIOS update that is later than the BIOS version currently installed on your computer. Make a note of the date, name, or other identifier. You may need this information to locate the update later, after it has been downloaded to your hard drive.
  - b. Follow the on-screen instructions to download your selection to the hard drive.

Make a note of the path to the location on your hard drive where the BIOS update is downloaded. You will need to access this path when you are ready to install the update.


 **NOTE:** NOTE: If you connect your computer to a network, consult the network administrator before installing any software updates, especially system BIOS updates.

BIOS installation procedures vary. Follow any instructions that are displayed on the screen after the download is complete. If no instructions are displayed, follow these steps:

1. From the Start screen, type *e*, and then click **File Explorer**.
2. Double-click your hard drive designation. The hard drive designation is typically Local Disk (C:).
3. Using the hard drive path you recorded earlier, open the folder on your hard drive that contains the update.
4. Double-click the file that has an .exe extension (for example, *filename.exe*).

The BIOS installation begins.

5. Complete the installation by following the on-screen instructions.

 **NOTE:** After a message on the screen reports a successful installation, you can delete the downloaded file from your hard drive.

# Using Advanced System Diagnostics

Advanced System Diagnostics allows you to run diagnostic tests to determine if the computer hardware is functioning properly. The following diagnostic tests are available in Advanced System Diagnostics:


- **System Tune-Up**—This group of additional tests checks your computer to make sure that the main components are functioning correctly. System Tune-Up runs longer and more comprehensive tests on memory modules, hard drive SMART attributes, the hard drive surface, the battery (and battery calibration), video memory, and the WLAN module status.
- **Start-up test**—This test analyzes the main computer components that are required to start the computer.
- **Run-in test**—This test repeats the start-up test and checks for intermittent problems that the start-up test does not detect.
- **Hard disk test**—This test analyzes the physical condition of the hard drive, and then checks all data in every sector of the hard drive. If the test detects a damaged sector, it attempts to move the data to a good sector.
- **Memory test**—This test analyzes the physical condition of the memory modules. If it reports an error, replace the memory modules immediately.
- **Battery test**—This test analyzes the condition of the battery and calibrates the battery if necessary. If the battery fails the test, contact HP support to report the issue and purchase a replacement battery.
- **BIOS Management**—You can update or rollback the version of the BIOS on the system. Do not shut down or remove external power during the process. You will be given a confirmation screen before your BIOS is modified. Select **BIOS update, BIOS Rollback, or Back to main menu**.

You can view system information and error logs or select languages in the Advanced System Diagnostics window.

To start Advanced System Diagnostics:

1. Turn on or restart the computer. While the “Press the ESC key for Startup Menu” message is displayed in the lower-left corner of the screen, press **esc**. When the Startup Menu is displayed, press **f2**.
2. Click the diagnostic test you want to run, and then follow the on-screen instructions.

---

 **NOTE:** If you need to stop a diagnostics test while it is running, press **esc**.

---

# 6 Specifications

## Computer specifications

	Metric	U.S.
<b>Dimensions</b>		
Width	<b>28.5 cm</b>	11.22 in
Depth	<b>21.2 cm</b>	8.35 in
Height	<b>2.22 cm</b>	0.87 in
<b>Weight</b> (equipped with 4096-MB memory module, mSATA solid-state drive, 6-cell battery, and WLAN module)	<b>1.40 kg</b>	3.09 lbs
<b>Input power</b>		
Operating voltage and current	18.5 Vdc @ 3.5 A – 65 W	
	19.5 Vdc @ 3.33 A – 65 W	
	19 Vdc @ 4.74 A – 90 W	
	19.5 Vdc @ 4.62 A – 90 W	
	19.5Vdc @ 2.31A – 45W	
<b>Temperature</b>		
Operating	<b>5°C to 35°C</b>	41°F to 95°F
Nonoperating	<b>-20°C to 60°C</b>	-4°F to 140°F
<b>Relative humidity</b> (noncondensing)		
Operating	10% to 90%	
Nonoperating	5% to 95%	
<b>Maximum altitude</b> (unpressurized)		
Operating	<b>-15 m to 3,048 m</b>	-50 ft to 10,000 ft
Nonoperating	<b>-15 m to 12,192 m</b>	-50 ft to 40,000 ft
<b>NOTE:</b> Applicable product safety standards specify thermal limits for plastic surfaces. The device operates well within this range of temperatures.		

## 11.6-inch UWVA display specifications

	<b>Metric</b>	<b>U.S.</b>
<b>Dimensions</b>		
Height	<b>14.50 cm</b>	5.71 in
Width	<b>25.70 cm</b>	10.12 in
Diagonal	<b>29.40 cm</b>	11.58 in
<b>Number of colors</b>	Up to 16.8 million	
<b>Contrast ratio</b>	200:1 (typical)	
<b>Brightness</b>	400 nits (typical)	
<b>Pixel resolution</b>		
Pitch	<b>0.197 × 0.197 mm</b>	
Format	1366 × 768	
Configuration	RGB vertical stripe	
<b>Backlight</b>	LED backlit	
<b>Character display</b>	80 × 25	
<b>Total power consumption</b>	3.46 W	
<b>Viewing angle</b>	±65° horizontal, ±50° vertical (typical)	

---


# 7 Backup and recovery

## Windows 8


To protect your information, use Windows backup and restore utilities to back up individual files and folders, back up your entire hard drive, create system repair media (select models only) by using the installed optical drive (select models only) or an optional external optical drive, or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.

From the Start screen, type `restore`, click **Settings**, and then select from the list of displayed options.

---

 **NOTE:** For detailed instructions on various backup and restore options, perform a search for these topics in HP Support Assistant. To access HP Support Assistant on the Start screen, select the **HP Support Assistant** app.

In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. Refer to HP Support Assistant. To access HP Support Assistant on the Start screen, select the **HP Support Assistant** app.

---

## Backing up your information

Recovery after a system failure is as good as your most recent backup. You should create system repair media and your initial backup immediately after initial system setup. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup. The system repair media (select models only) are used to start up (boot) the computer and repair the operating system in case of system instability or failure. Your initial and subsequent backups allow you to restore your data and settings if a failure occurs.

On Start screen, type `backup`, click **Settings**, and then select **Save backup copies of your files with File History**.


You can back up your information to an optional external hard drive or a network drive.


Note the following when backing up:

- Store personal files in the Documents library, and back it up regularly.
- Back up templates that are stored in their associated programs.
- Save customized settings that appear in a window, toolbar, or menu bar by taking a screen shot of your settings. The screen shot can be a time-saver if you have to reset your preferences.

To create a backup using Backup and Restore:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

 **NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---


1. From the Start screen, type `backup`, click **Settings**, and then select from the list of displayed options.
2. Follow the on-screen instructions to set up your backup, create a system image (select models only), or create system repair media (select models only).

## Performing a system recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use Windows Backup and Restore to recover information you have previously backed up. You can also use Windows Automatic Repair to fix problems that might prevent Windows from starting correctly.
- **f11** recovery tools: You can use the **f11** recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

---

 **NOTE:** If you are unable to boot (start up) your computer and you cannot use the system repair media you previously created (select models only), you must purchase Windows 8 operating system media to reboot the computer and repair the operating system.

---


## Using the Windows recovery tools

To recover information you previously backed up:

- ▲ Access HP Support Assistant. To access HP Support Assistant on the Start screen, select the **HP Support Assistant** app.

To recover your information using Automatic Repair, follow these steps:

---

 **CAUTION:** Some Automatic Repair options will completely erase and reformat the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.


---

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition and the Windows partition.

From the Start screen, type **e**, and then click **File Explorer**.


– or –

From the Start screen, type **c**, and then select **Computer**.

 **NOTE:** If the Windows partition and the HP Recovery partition are not listed, you must recover your operating system and programs using the Windows 8 operating system DVD and the Driver Recovery media (both purchased separately). For additional information, see [Using Windows 8 operating system media \(purchased separately\) on page 73](#).


---

3. If the Windows partition and the HP Recovery partition are listed, restart the computer. After Windows has loaded, press and hold the **shift** key while clicking **Restart**.
4. Select **Troubleshoot**, then select **Advanced Options**, and then select **Automatic Repair**.
5. Follow the on-screen instructions.

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support Assistant. To access HP Support Assistant on the Start screen, select the **HP Support Assistant** app.

---


## Using f11 recovery tools

 **CAUTION:** Using **f11** completely erases hard drive contents and reformats the hard drive. All files that you have created and any software that you have installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

---

To recover the original hard drive image using **f11**:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition: From the Start screen, type **C**, and then select **Computer**.

 **NOTE:** If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 8 operating system media and the Driver Recovery media (both purchased separately). For additional information, see [Using Windows 8 operating system media \(purchased separately\) on page 73](#).

---

3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.




4. Press **f11** while the “Press <F11>for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using Windows 8 operating system media (purchased separately)


To order a Windows 8 operating system DVD, go to <http://www.hp.com/support>, select your country or region, and follow the on-screen instructions. You can also order the DVD by calling support. For contact information, see the Worldwide Telephone Numbers booklet included with the computer.

---

 **CAUTION:** Using a Windows 8 operating system media completely erases hard drive contents and reformats the hard drive. All files that you have created and any software that you have installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows 8 operating system DVD:

 **NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows 8 operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.


After the repair is completed:


1. Eject the Windows 8 operating system media and then insert the *Driver Recovery* media.
2. Install the Hardware Enabling Drivers first, and then install Recommended Applications.


## Using Windows Refresh for quick and easy recovery

When your computer is not working properly and you need to regain system stability, the Windows Refresh option allows you to start fresh and keep what is important to you.

---

 **IMPORTANT:** Refresh removes any traditional applications that were not originally installed on the system at the factory.

 **NOTE:** During Refresh, a list of removed traditional applications will be saved so that you have a quick way to see what you might need to reinstall. See HP Support Assistant for instructions on reinstalling traditional applications. To access HP Support Assistant on the Start screen, select the **HP Support Assistant** app.

 **NOTE:** You may be prompted for your permission or password when using Refresh. See Windows Help and Support for more information. To access HP Support Assistant on the Start screen, select the **HP Support Assistant** app.

---

To start Refresh:

1. On the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Refresh your PC without affecting your files**, select **Get started**, and follow the on-screen instructions.

## Remove everything and reinstall Windows

Sometimes you want to perform detailed reformatting of your computer, or you want to remove personal information before you give away or recycle your computer. The process described in this section provides a speedy, simple way to return the computer to its original state. This option removes all personal data, apps, and settings from your computer, and reinstalls Windows.



**IMPORTANT:** This option does not provide backups of your information. Before using this option, back up any personal information you wish to retain.

You can initiate this option by using the **f11** key or from the Start screen.

To use the **f11** key:

1. Press **f11** while the computer boots.  
– or –  
Press and hold **f11** as you press the power button.
2. Select **Troubleshoot** from the boot options menu.
3. Select **Reset your PC**, and follow the on-screen instructions.

To use the Start screen:

1. On the Start screen, point to the far-right upper or lower corner of the screen to display the charms.
2. Click **Settings**.
3. Click **Change PC settings** in the bottom-right corner of the screen, and then select **General** from the PC settings screen.
4. Under **Remove everything and reinstall Windows**, select **Get started**, and follow the on-screen instructions.

## Using HP Software Setup

HP Software Setup can be used to reinstall drivers or select software that has been corrupted or deleted from the system.

1. From the Start screen, type `HP Software Setup`, and select **Apps**.
2. Open HP Software Setup.
3. Follow the on-screen directions to reinstall drivers or select software.


## Windows 7

To protect your information, use Windows Backup and Restore to back up individual files and folders, back up your entire hard drive (select models only), create system repair discs (select models only) with the installed optical drive (select models only) or an optional external optical drive, or create system restore points. In case of system failure, you can use the backup files to restore the contents of your computer.


Windows Backup and Restore provides the following options:

- Creating a system repair disc (select models only) by using the installed optical drive (select models only) or an optional external optical drive
- Backing up your information
- Creating a system image (select models only)
- Scheduling automatic backups (select models only)
- Creating system restore points
- Recovering individual files
- Restoring the computer to a previous state
- Recovering information using recovery tools

---

 **NOTE:** For detailed instructions, perform a search for these topics in Help and Support.

In case of system instability, HP recommends that you print the recovery procedures and save them for later use.

 **NOTE:** Windows includes the User Account Control feature to improve the security of your computer. You may be prompted for your permission or password for tasks such as installing software, running utilities, or changing Windows settings. See Help and Support for more information.

---


## Creating recovery media with HP Recovery Disc Creator

HP Recovery Disc Creator is a software program that offers an alternative way to create recovery media. After you successfully set up the computer, you can create recovery media using HP Recovery Disc Creator. This recovery media performs a system recovery if the hard drive becomes corrupted. A system recovery reinstalls the original operating system and the software programs installed at the factory, and then configures the settings for the programs.

HP Recovery Disc Creator can create two kinds of recovery DVDs as follows:

- Windows DVD—Installs the operating system without additional drivers or applications. Choosing this selection creates a DVD that restores the original operating system and the software programs installed at the factory.
- Driver DVD—Installs specific drivers and applications only, in the same way that the HP Software Setup utility installs drivers and applications.

## Creating recovery media

 **NOTE:** Operating system recovery media can be created only once. Thereafter, the option to create that media will not be available.

1. Select **Start > All Programs > Productivity and Tools > HP Recovery Disc Creator**.
2. Select **Driver DVD or Windows DVD**.
3. From the drop-down menu, select the drive for burning the recovery media.
4. Click the **Burn** button to start the burning process.

## Backing up your information


Recovery after a system failure is as good as your most recent backup. Immediately after software setup, you should create system repair discs (select models only) using HP Recovery Disc Creator using the installed optical drive (select models only) or an optional external optical drive and back up your system. As you add new software and data files, you should continue to back up your system on a regular basis to maintain a reasonably current backup. The system repair discs (select models only) are used to start up (boot) the computer and repair the operating system in case of system instability or failure. Your initial and subsequent backups allow you to restore your data and settings if a failure occurs.

You can back up your information to an optional external hard drive, a network drive, or discs.

Note the following when backing up:

- Store personal files in the Documents library, and back it up regularly.
- Back up templates that are stored in their associated programs.
- When backing up to discs, use any of the following types of discs (purchased separately): CD-R, CD-RW, DVD+R, DVD+R DL, DVD-R, DVD-R DL, or DVD±RW. The discs you use will depend on the type of optical drive you are using.

---


 **NOTE:** DVDs and DVDs with double-layer (DL) support store more information than CDs, so using them for backup reduces the number of recovery discs required.

---


- When backing up to discs, number each disc before inserting it into the external drive.

To create a backup using Backup and Restore:

---

 **NOTE:** Be sure that the computer is connected to AC power before you start the backup process.

---

 **NOTE:** The backup process may take over an hour, depending on file size and the speed of the computer.

---


1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to set up your backup, create a system image (select models only), or create a system repair disc (select models only).

## Performing a system recovery

In case of system failure or instability, the computer provides the following tools to recover your files:

- Windows recovery tools: You can use Windows Backup and Restore to recover information you have previously backed up. You can also use Windows Startup Repair to fix problems that might prevent Windows from starting correctly.
- f11 recovery tools: You can use the f11 recovery tools to recover your original hard drive image. The image includes the Windows operating system and software programs installed at the factory.

---

 **NOTE:** If you are unable to boot (start up) your computer and you cannot use the system repair discs you previously created (select models only), you must purchase a Windows 7 operating system DVD to reboot the computer and repair the operating system. For additional information, see [Using a Windows 7 operating system DVD \(purchased separately\) on page 79](#).

---


## Using the Windows recovery tools

To recover information you previously backed up:

1. Select **Start > All Programs > Maintenance > Backup and Restore**.
2. Follow the on-screen instructions to recover your system settings, your computer (select models only), or your files.

To recover your information using Startup Repair, follow these steps:

---

 **CAUTION:** Using Startup Repair completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process restores the operating system, as well as the drivers, software, and utilities from the backup used for recovery.


---

1. If possible, back up all personal files.
2. If possible, check for the presence of the Windows partition and the HP Recovery partition.

To check for the Windows partition, select **Start > Computer**.

To check for the HP Recovery partition, click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.


---

 **NOTE:** If the HP Recovery partition has been deleted, the **f11** restore option will not function. You must recover your operating system and programs using the Windows 7 operating system DVD and the Driver Recovery disc (both purchased separately) if the Windows partition and the HP Recovery partition are not listed. For additional information, see [Using a Windows 7 operating system DVD \(purchased separately\) on page 79](#).

---

3. If the Windows partition and the HP Recovery partition are listed, restart the computer, and then press **f8** before the Windows operating system loads.
4. Select **Startup Repair**.
5. Follow the on-screen instructions.


---

 **NOTE:** For additional information on recovering information using the Windows tools, perform a search for these topics in Help and Support.

---

## Using **f11** recovery tools

---


 **CAUTION:** Using **f11** recovery tools completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. The **f11** recovery tool reinstalls the operating system and HP programs and drivers that were installed at the factory. Software not installed at the factory must be reinstalled.

---

To recover the original hard drive image using **f11**:

1. If possible, back up all personal files.
2. If possible, check for the presence of the HP Recovery partition: click **Start**, right-click **Computer**, click **Manage**, and then click **Disk Management**.

---

 **NOTE:** If the HP Recovery partition is not listed, you must recover your operating system and programs using the Windows 7 operating system DVD and the Driver Recovery disc (both purchased separately). For additional information, see [Using a Windows 7 operating system DVD \(purchased separately\) on page 79](#).


---

3. If the HP Recovery partition is listed, restart the computer, and then press **esc** while the “Press the ESC key for Startup Menu” message is displayed at the bottom of the screen.
4. Press **f11** while the “Press <F11> for recovery” message is displayed on the screen.
5. Follow the on-screen instructions.

## Using a Windows 7 operating system DVD (purchased separately)


To order a Windows 7 operating system DVD, contact support. For U.S. support, go to <http://www.hp.com/go/contactHP>. For worldwide support, go to [http://welcome.hp.com/country/us/en/wwcontact\\_us.html](http://welcome.hp.com/country/us/en/wwcontact_us.html). You can also order the DVD by calling support. For contact information, see the Worldwide Telephone Numbers booklet included with the computer.

---

 **CAUTION:** Using a Windows 7 operating system DVD completely erases hard drive contents and reformats the hard drive. All files you have created and any software installed on the computer are permanently removed. When reformatting is complete, the recovery process helps you restore the operating system, as well as drivers, software, and utilities.

---

To initiate recovery using a Windows 7 operating system DVD:

 **NOTE:** This process takes several minutes.

---

1. If possible, back up all personal files.
2. Restart the computer, and then insert the Windows 7 operating system DVD into the optical drive before the Windows operating system loads.
3. When prompted, press any keyboard key.
4. Follow the on-screen instructions.
5. Click **Next**.
6. Select **Repair your computer**.
7. Follow the on-screen instructions.

After the repair is completed:

1. Eject the Windows 7 operating system DVD, and then insert the *Driver Recovery* disc.
2. Install the Hardware Enabling Drivers first, and then install Recommended Applications.

---

## 8 Power cord set requirements

The wide-range input feature of the computer permits it to operate from any line voltage from 100 to 120 volts AC, or from 220 to 240 volts AC.

The 3-conductor power cord set included with the computer meets the requirements for use in the country or region where the equipment is purchased.

Power cord sets for use in other countries and regions must meet the requirements of the country or region where the computer is used.

### Requirements for all countries

The following requirements are applicable to all countries and regions:

- The length of the power cord set must be at least **1.0 m** (3.3 ft) and no more than **2.0 m** (6.5 ft).
- All power cord sets must be approved by an acceptable accredited agency responsible for evaluation in the country or region where the power cord set will be used.
- The power cord sets must have a minimum current capacity of 10 amps and a nominal voltage rating of 125 or 250 V AC, as required by the power system of each country or region.
- The appliance coupler must meet the mechanical configuration of an EN 60 320/IEC 320 Standard Sheet C13 connector for mating with the appliance inlet on the back of the computer.



# Requirements for specific countries and regions

Country/region	Accredited agency	Applicable note number
Australia	EANSW	1
Austria	OVE	1
Belgium	CEBC	1
Canada	CSA	2
Denmark	DEMKO	1
Finland	FIMKO	1
France	UTE	1
Germany	VDE	1
Italy	IMQ	1
Japan	METI	3
The Netherlands	KEMA	1
Norway	NEMKO	1
The People's Republic of China	COC	5
South Korea	EK	4
Sweden	SEMKO	1
Switzerland	SEV	1
Taiwan	BSMI	4
The United Kingdom	BSI	1
The United States	UL	2

1. The flexible cord must be Type HO5VV-F, 3-conductor, 1.0-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
2. The flexible cord must be Type SPT-3 or equivalent, No. 18 AWG, 3-conductor. The wall plug must be a two-pole grounding type with a NEMA 5-15P (15 A, 125 V) or NEMA 6-15P (15 A, 250 V) configuration.
3. The appliance coupler, flexible cord, and wall plug must bear a "T" mark and registration number in accordance with the Japanese Dentori Law. The flexible cord must be Type VCT or VCTF, 3-conductor, 1.00-mm<sup>2</sup> conductor size. The wall plug must be a two-pole grounding type with a Japanese Industrial Standard C8303 (7 A, 125 V) configuration.
4. The flexible cord must be Type RVV, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.
5. The flexible cord must be Type VCTF, 3-conductor, 0.75-mm<sup>2</sup> conductor size. Power cord set fittings (appliance coupler and wall plug) must bear the certification mark of the agency responsible for evaluation in the country or region where it will be used.

---

## 9 Recycling

When a non-rechargeable or rechargeable battery has reached the end of its useful life, do not dispose of the battery in general household waste. Follow the local laws and regulations in your area for battery disposal.

HP encourages customers to recycle used electronic hardware, HP original print cartridges, and rechargeable batteries. For more information about recycling programs, see the HP Web site at <http://www.hp.com/recycle>.

# Index

## A

AC adapter light 13  
AC adapter, spare part numbers 21, 22  
ambient light sensor 9  
antenna, location 9  
audio, product description 2  
audio-in jack 14  
audio-out jack 14

## B

battery  
    removal 33  
    spare part number 21, 22, 33  
battery bay 15  
battery bay cover release latch 15  
bottom components 15  
bottom cover  
    removal 48  
    spare part number 20, 23, 48  
button board  
    removal 52  
    spare part number 20, 23, 52  
buttons  
    power 14  
    rotation lock 14  
    TouchPad 12  
    TouchPad on/off 12  
    volume 14  
    Windows 10  
    Windows Home 9

## C

cables, service considerations 27  
caps lock light 11  
chipset, product description 1  
components  
    bottom 15

display 9  
    keys 10  
    left-side 12  
    lights 11  
    rear 13  
    right-side 14  
    TouchPad 12  
computer  
    major components 18  
    part number 32  
    specifications 68  
connectors, service considerations 27

## D

display  
    components 9  
    specifications 69  
display assembly  
    removal 61  
    spare part number 19, 23, 61  
display panel, product description 1  
DisplayPort 13  
docking port 14  
docking, product description 3  
drives, preventing damage 27

## E

electrostatic discharge 28  
equipment guidelines 30  
esc key 10  
Ethernet, product description 2

## F

fan/heat sink assembly  
    removal 55  
    spare part number 20, 23, 55  
fn key 10

function keys 10

## G

graphics, product description 1  
grounding guidelines 28  
guidelines  
    equipment 30  
    grounding 28  
    packaging 29  
    transporting 29  
    workstation 29

## H

headphone jack 14  
hinge cover  
    removal 59  
    spare part number 19, 23, 59

## J

jacks  
    audio-in 14  
    audio-out 14  
    headphone 14  
    microphone 14  
    network 13  
    RJ-45 (network) 13

## K

key components 10  
keyboard  
    product description 3  
    removal 44  
    spare part numbers 19, 24, 25, 44  
keys  
    esc 10  
    fn 10  
    function 10  
    Windows application 10

- L**
- left-side components 12
- light components 11
- lights
  - AC adapter 13
  - caps lock 11
  - microphone mute 11
  - mute 11
  - num lock 11
  - power 14
  - TouchPad 11
  - webcam 9
  - wireless 11
- M**
- Media Card Reader, location 14
- memory module
  - product description 1
  - removal 41
  - spare part numbers 20, 22, 41
- micro SD Card bezel, removal 34
- microphone
  - location 9
  - product description 2
- microphone jack 14
- microphone mute light 11
- model description 32
- model name 1
- mute light 11
- N**
- network jack 13
- NFC antenna 15
- NFC board
  - removal 43
  - spare part number 20, 23, 43
- num lock light 11
- numeric keypad 10
- O**
- operating system, product description 4
- P**
- packaging guidelines 29
- pen, spare part number 21, 24
- plastic parts, service considerations 26
- Plastics/Rubber Kit, spare part number 21, 23
- pointing device, product description 3
- ports
  - DisplayPort 13
  - docking 14
  - product description 2
  - USB 3.0 13
- power button 14
- power connector 13
- power cord
  - set requirements 80
  - spare part numbers 21, 22
- power light 14
- power requirements, product description 3
- processor, product description 1
- product description
  - audio 2
  - chipset 1
  - display panel 1
  - docking 3
  - Ethernet 2
  - external media cards 2
  - graphics 1
  - keyboard 3
  - memory module 1
  - microphone 2
  - operating system 4
  - pointing device 3
  - ports 2
  - power requirements 3
  - processors 1
  - product name 1
  - security 3
  - sensors 3
  - serviceability 6
  - solid-state drive 1
  - video 2
  - wireless 2
- product name 1, 31
- product number 32
- R**
- rear components 13
- removal/replacement
  - preliminaries 26
  - procedures 31
- right-side components 14
- RJ-45 (network) jack 13
- rotation lock button 14
- RTC battery
  - removal 54
  - spare part number 20, 23, 54
- rubber screw cover, removal 34
- S**
- Screw Kit, spare part number 22, 24
- security cable slot, location 13
- security, product description 3
- sensors, product description 3
- serial number 31
- service considerations
  - cables 27
  - connectors 27
  - plastic parts 26
- service cover
  - location 15
  - removal 34
  - spare part number 21, 23, 34
- service tag 17, 31
- serviceability, product description 6
- solid-state drive
  - precautions 27
  - product description 1
  - removal 40
  - spare part numbers 21, 25, 40
- Speaker Kit, spare part number 20, 23, 50
- speakers
  - location 12, 14
  - removal 50
  - spare part number 20, 23, 50
- specifications
  - computer 68
  - display 69
- system board
  - removal 57
  - spare part numbers 23, 57
- T**
- tools required 26
- top cover, spare part number 20, 23
- TouchPad button 12
- TouchPad components 12
- TouchPad light 11
- TouchPad on/off button 12

TouchPad zone 12  
transporting guidelines 29

## U

USB 3.0 port 13

## V

vent 12, 15  
video, product description 2  
volume button 14

## W

warranty period 32  
webcam 9  
webcam light 9  
Windows application key 10  
Windows button 10  
Windows Home button 9  
wireless antenna, location 9  
wireless light 11  
wireless, product description 2  
WLAN module  
    removal 38  
    spare part numbers 21, 22,  
    38  
workstation guidelines 29  
WWAN module  
    removal 36  
    spare part numbers 21, 22,  
    36

